# DRAWINGS CATALOGUE

OF SELECTED DAKO AIR BRAKE PARTS INTERCHANGEABLE FOR BRAKE PARTS OF OTHER PRODUCERS



#### CONTENT


<ol> <li>BRAKE COUPLINGS         <ol> <li>Brake coupling DAKO - normal type</li> <li>Brake coupling DAKO - mirror type</li> <li>Braided hose coupling DAKO</li> <li>Hose coupling DAKO BH                  <ul></ul></li></ol></li></ol>	<b>3</b> length
<ul> <li>2. COUPLING COCKS DAKO KK</li> <li>2.1 Coupling cock DAKO KK 1 ¼" - left design</li> <li>2.2 Coupling cock DAKO KK 1 ¼" - right design</li> <li>2.3 Coupling cock DAKO KK 1" - left design</li> <li>2.4 Coupling cock DAKO KK 1" - right design</li> </ul>	24
<ul> <li>3. CHANGE OVER DEVICES DAKO</li> <li>3.1 Change over device DAKO G-P</li> <li>3.2 Change over device DAKO "Load - Empty"</li> <li>3.3 Change over device DAKO "On - Off"</li> </ul>	26
<ul> <li>4. LOAD WEIGHING VALVE DAKO SL2 + GUIDING PLATES</li> <li>4.1 Load weighing valve DAKO SL2</li> <li>4.2 Load weighing valve DAKO SL2</li> <li>4.3 Guiding plate</li> </ul>	30
<ul> <li>5. BRAKE CYLINDERS DAKO TB</li> <li>5.1 Brake cylinders DAKO TB without fulcrum bracket - 8", 9", 10", 12", 14"</li> <li>5.2 Brake cylinders DAKO TB with fulcrum bracket - 8", 9", 10", 12", 14", 16</li> </ul>	
<ul> <li>6. DISC BRAKE PAD HOLDERS</li> <li>6.1 Disc brake pad holder 350 cm<sup>2</sup> - right and left design</li> <li>6.2 Disc brake pad holder 400 cm<sup>2</sup> - right and left design</li> </ul>	48
<ul> <li>7. DIAGNOSTIC CONNECTORS</li> <li>7.1 Diagnostic connector without nozzle - ¼"</li> <li>7.2 Diagnostic connector without nozzle - ½"</li> </ul>	51
<ul> <li>8. BRAKING INDICATORS</li> <li>8.1 Two - window braking indicator</li> <li>8.2 One - window braking indicator</li> </ul>	56


<ul> <li>9. AIR FILTERS</li> <li>9.1 Air filter G 3/8"</li> <li>9.2 Air filter G 1/2"</li> <li>9.3 Air filter <sup>3</sup>/<sub>4</sub>"</li> </ul>	65
<ul> <li>10. DUST COLLECTORS</li> <li>10.1 Dust collector 1"</li> <li>10.2 Dust collector 1 ¼"</li> </ul>	70
<ul> <li>11. DIRECT COCKS DAKO KZ and KZS</li> <li>11.1 Direct cock DAKO KZ 1" <ul> <li>right type with venting or without venting</li> <li>left type with venting or without venting</li> </ul> </li> <li>11.2 Direct cock DAKO KZ 3/4" <ul> <li>right type with venting or without venting</li> <li>left type with venting or without venting</li> <li>left type with venting or without venting</li> </ul> </li> <li>11.3 Direct cock DAKO KZ 1/2" <ul> <li>right type with venting or without venting</li> <li>left type with venting or without venting</li> <li>11.5 Direct cock DAKO KZS 1" <ul> <li>right type with venting or without venting</li> <li>left type with venting or without venting</li> </ul> </li> <li>11.6 Direct cock DAKO KZS 1" <ul> <li>right type with venting or without venting</li> <li>left type with venting or without venting</li> </ul> </li> </ul></li></ul>	73
<ul> <li>12. NON-RETURN VALVES DAKO</li> <li>12.1 Non-return valve DAKO JV6 - four designs</li> <li>12.2 Non-return valve DAKO JV10 - four designs</li> <li>12.3 Non-return valve DAKO JV15 - four designs</li> <li>12.4 Non-return valve DAKO JV25 - four designs</li> </ul>	80
13. AIR COUPLINGS	85


## 1. BRAKE COUPLINGS


- 1.1 Brake coupling DAKO normal type
- 1.2 Brake coupling DAKO mirror type
- 1.3 Braided hose coupling DAKO
- 1.4 Hose coupling DAKO BH
  - Of course, DAKO-CZ, a.s. is able to ensure brake couplings with other length according to customers requirements.




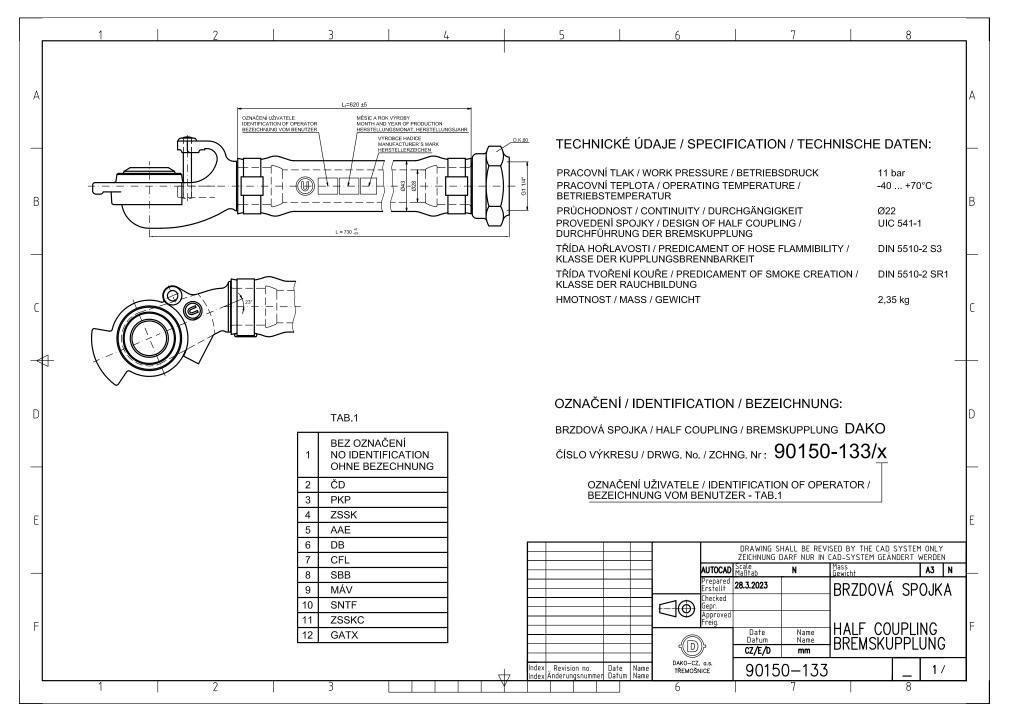


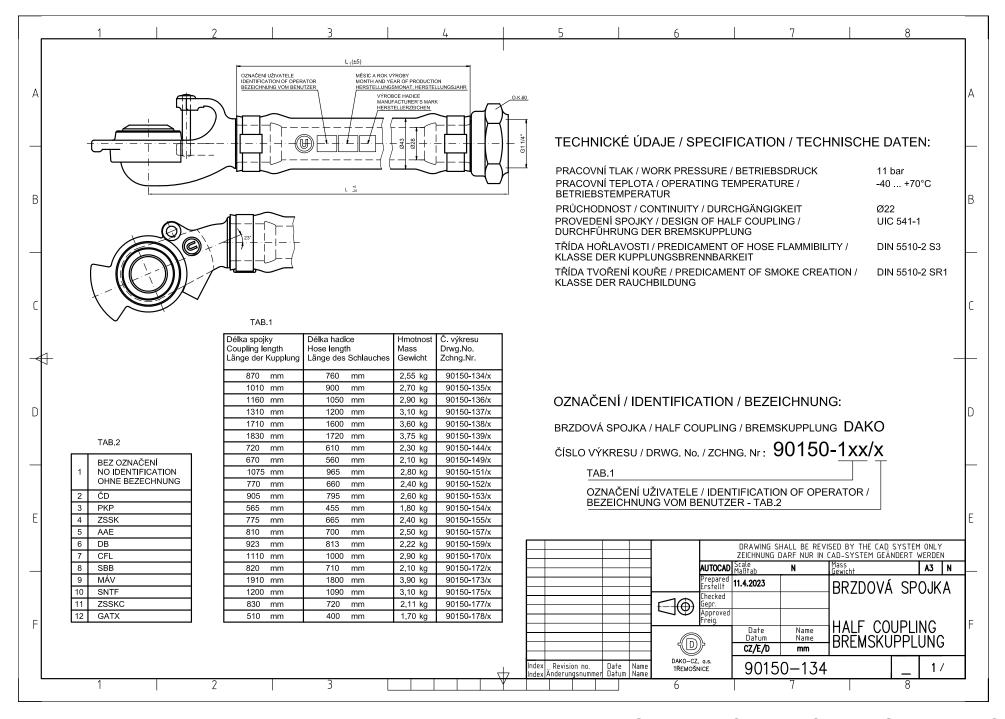


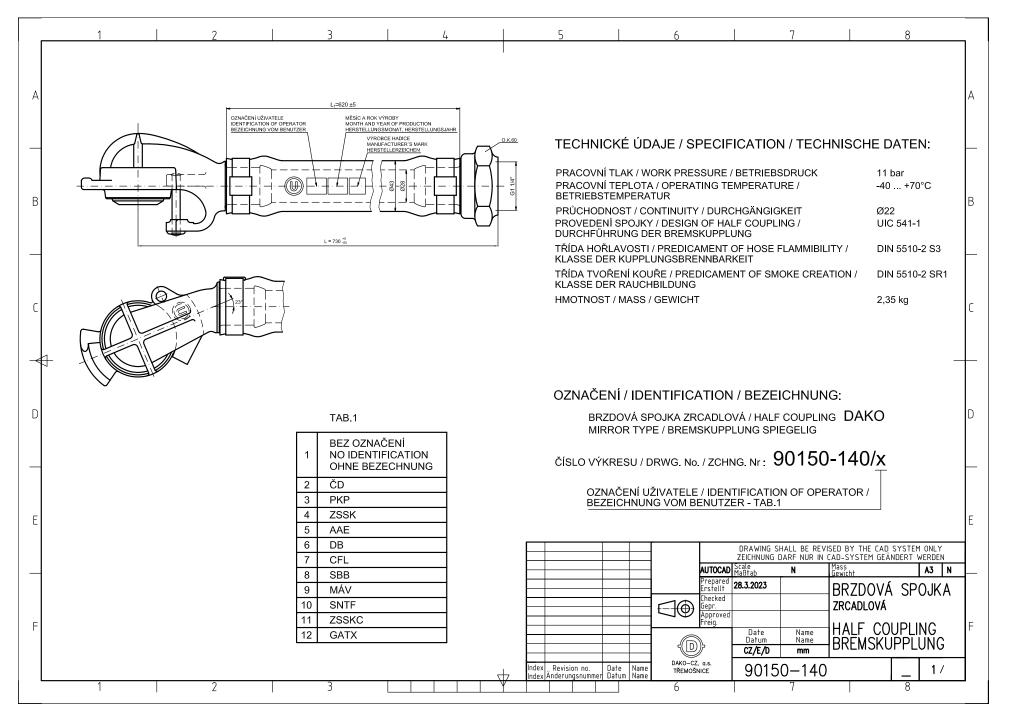


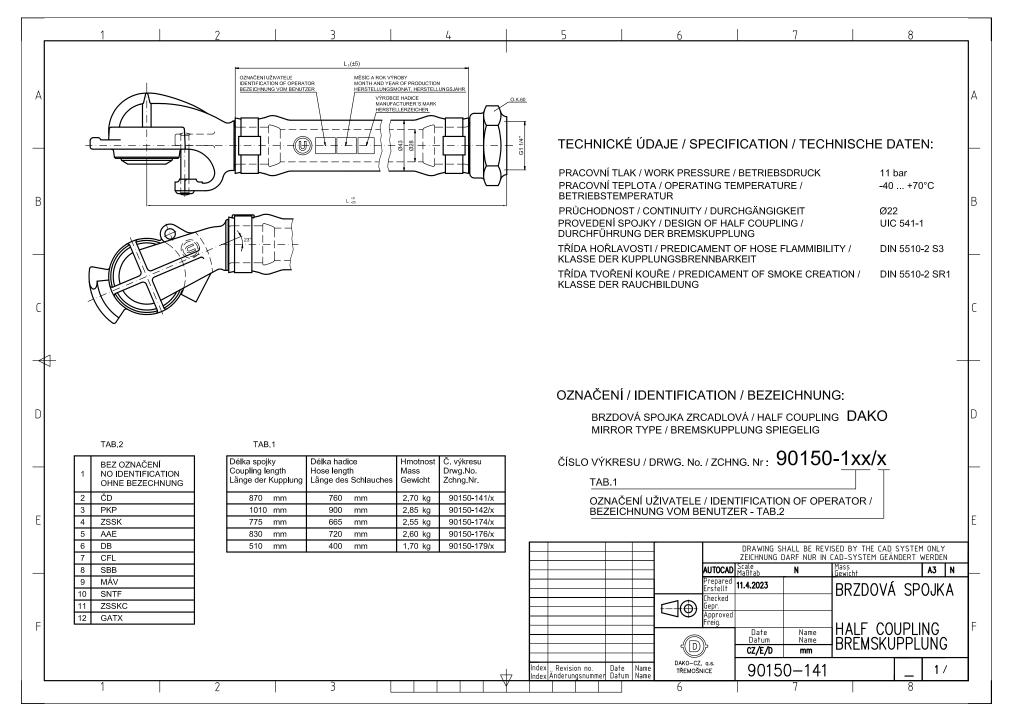


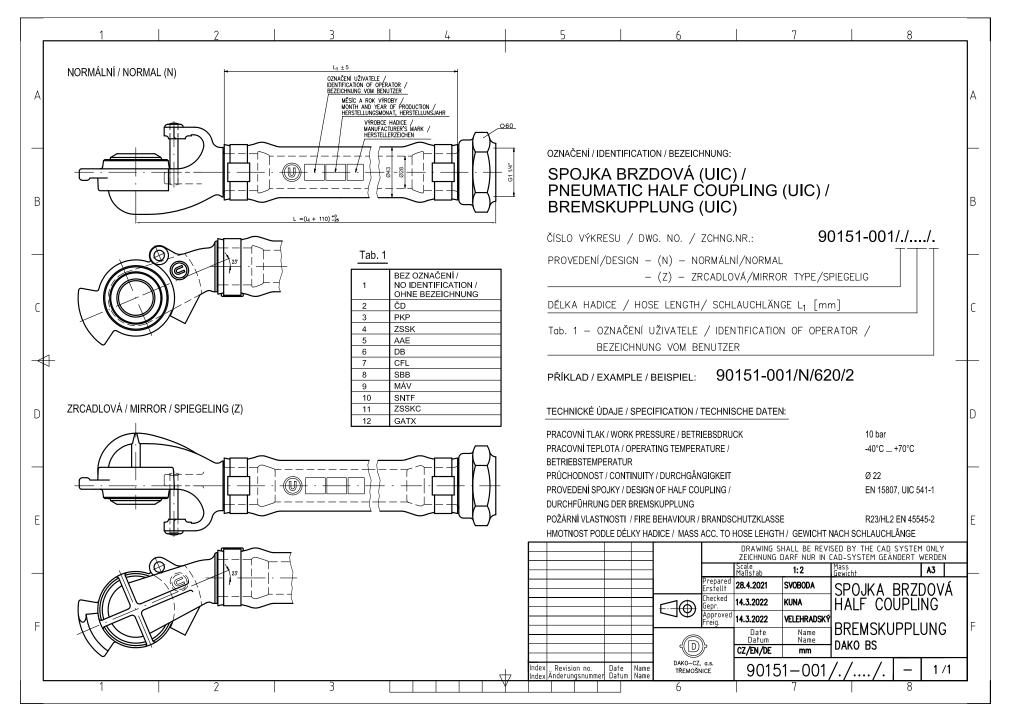


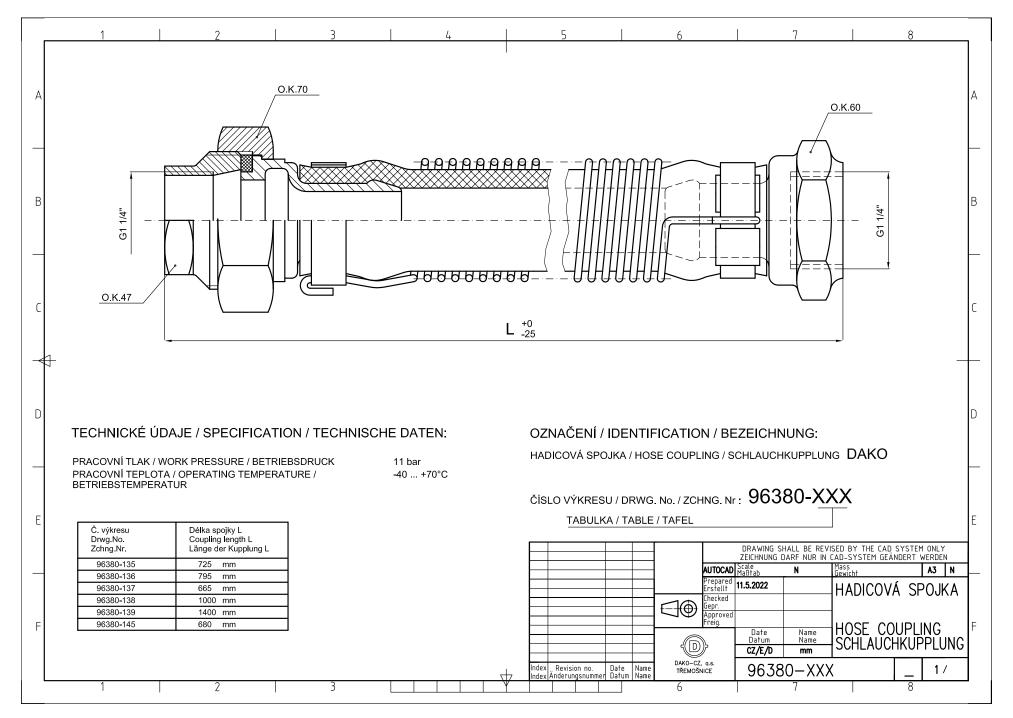


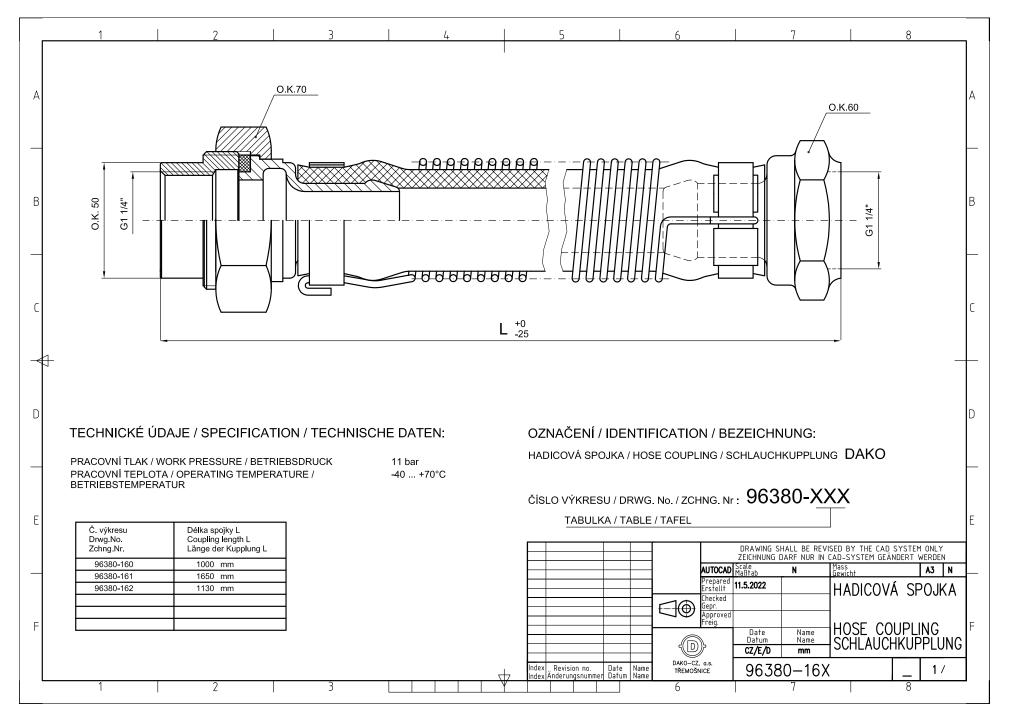


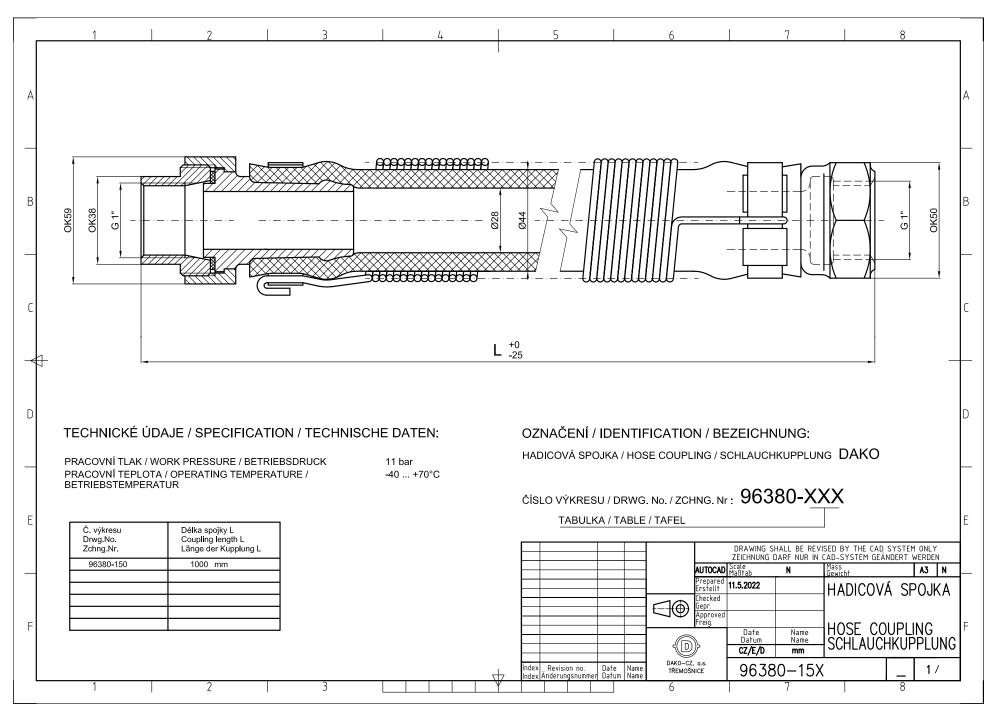


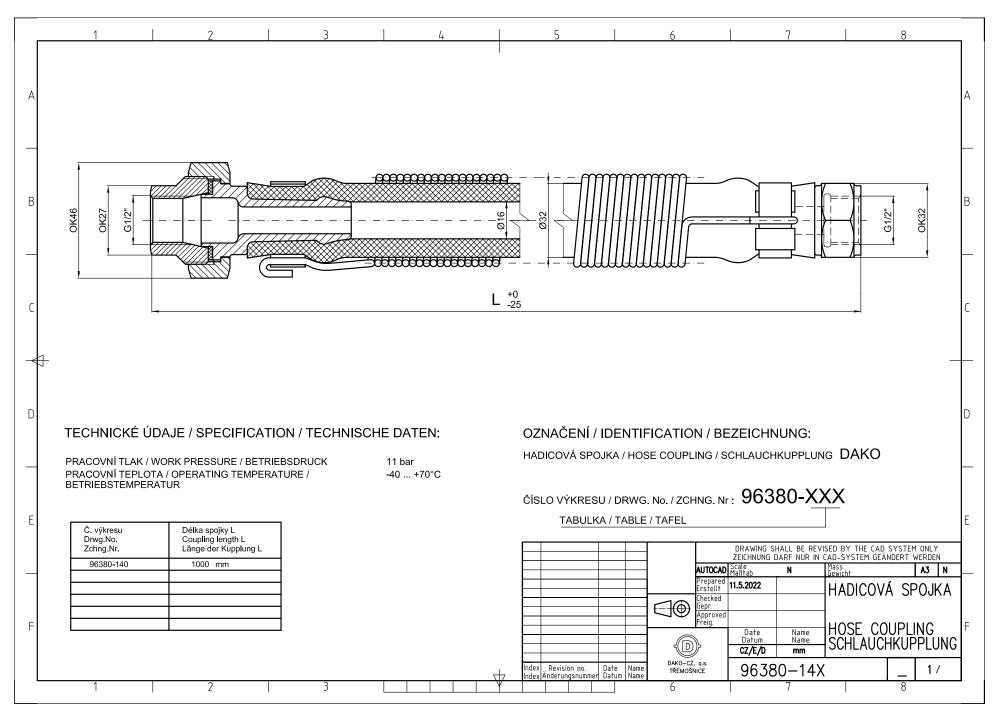


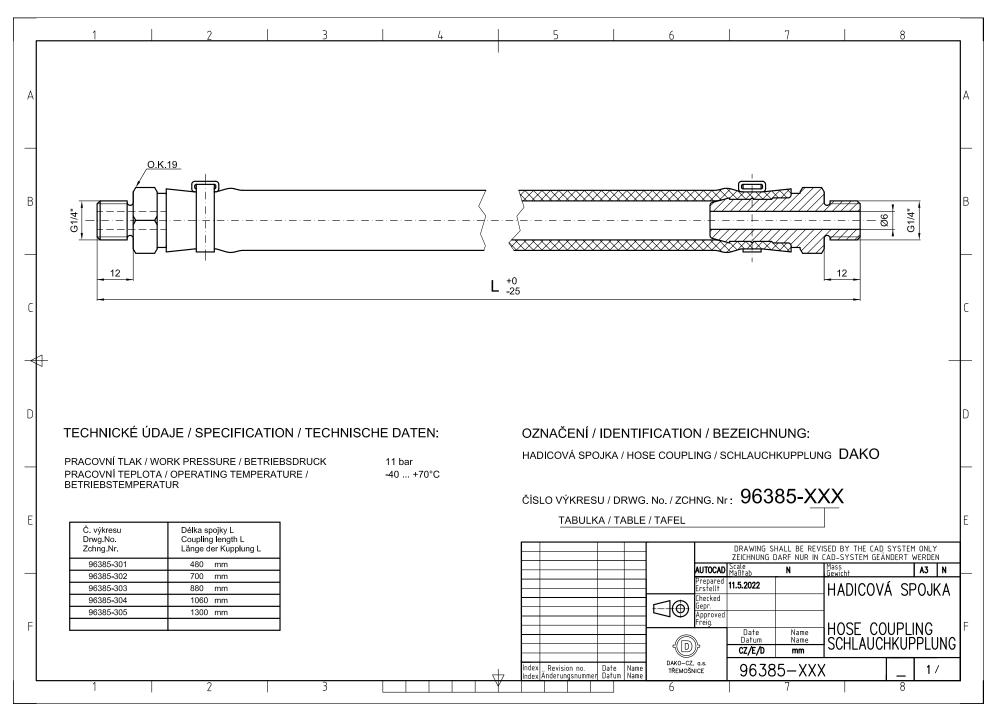


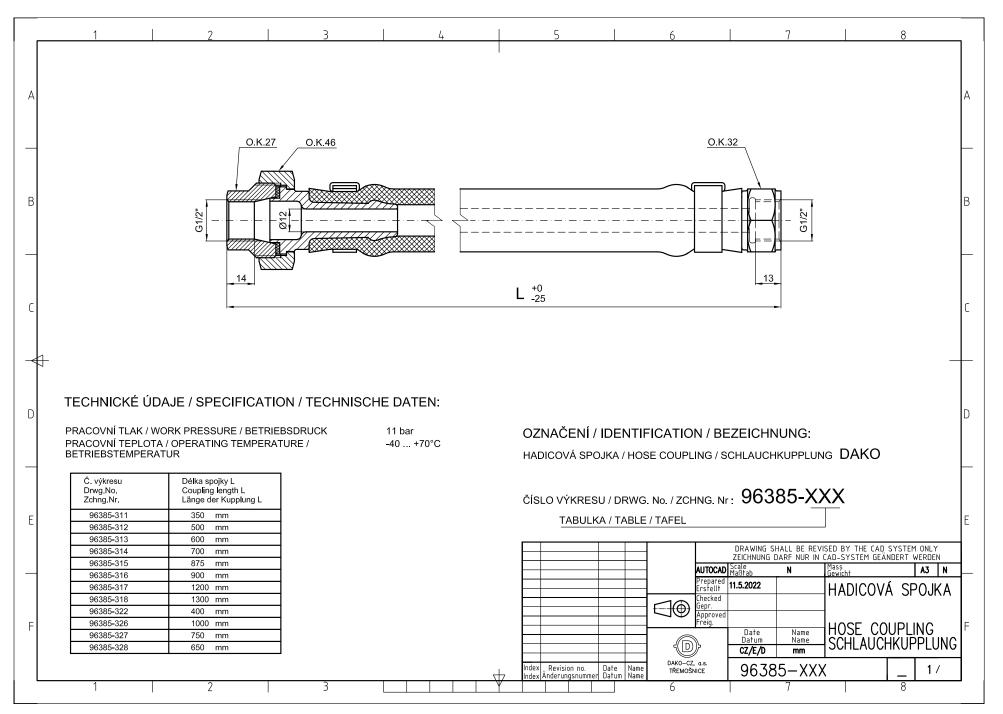


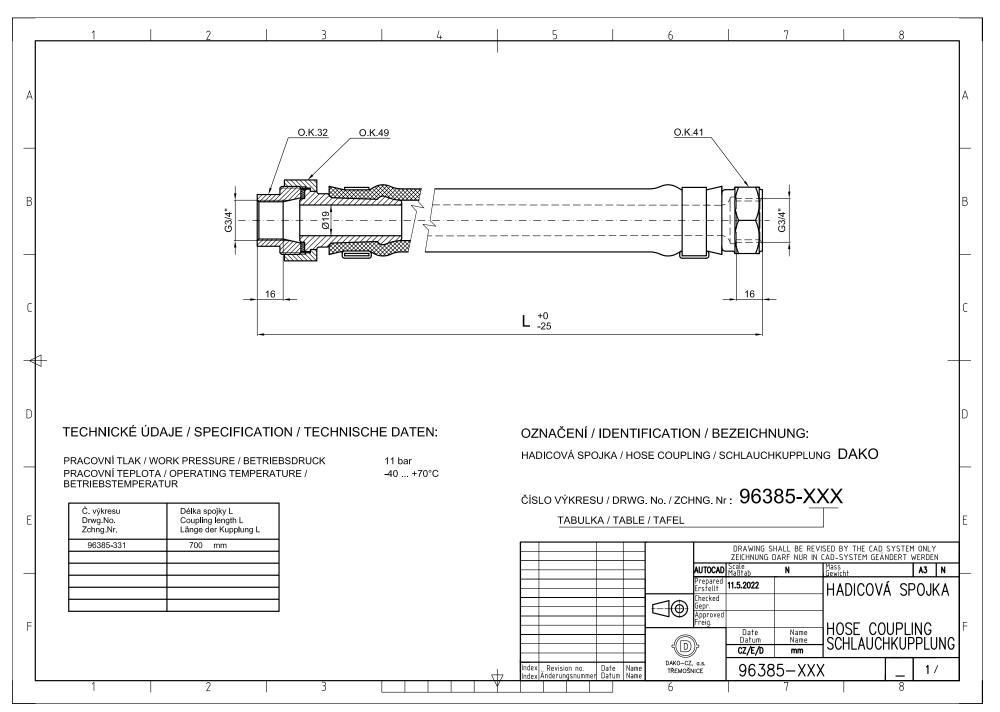


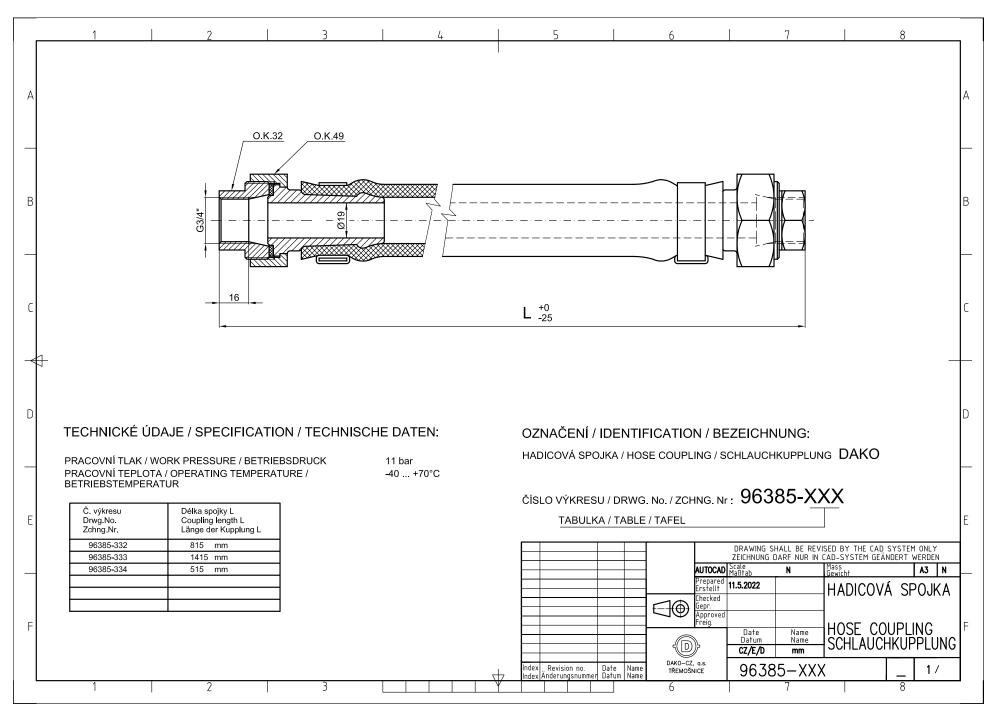


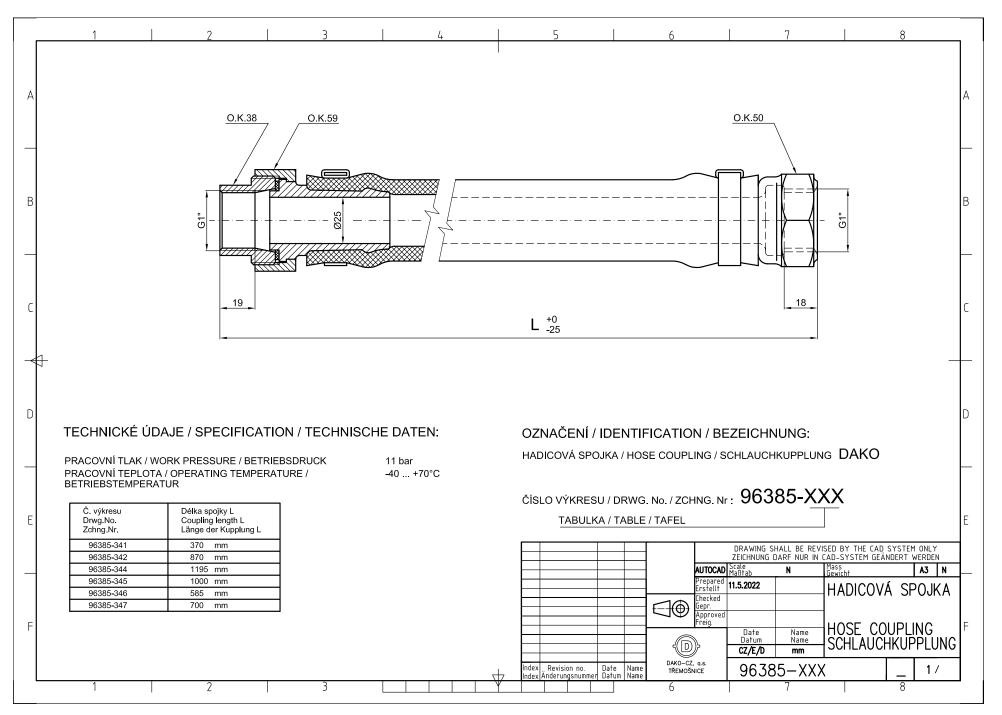


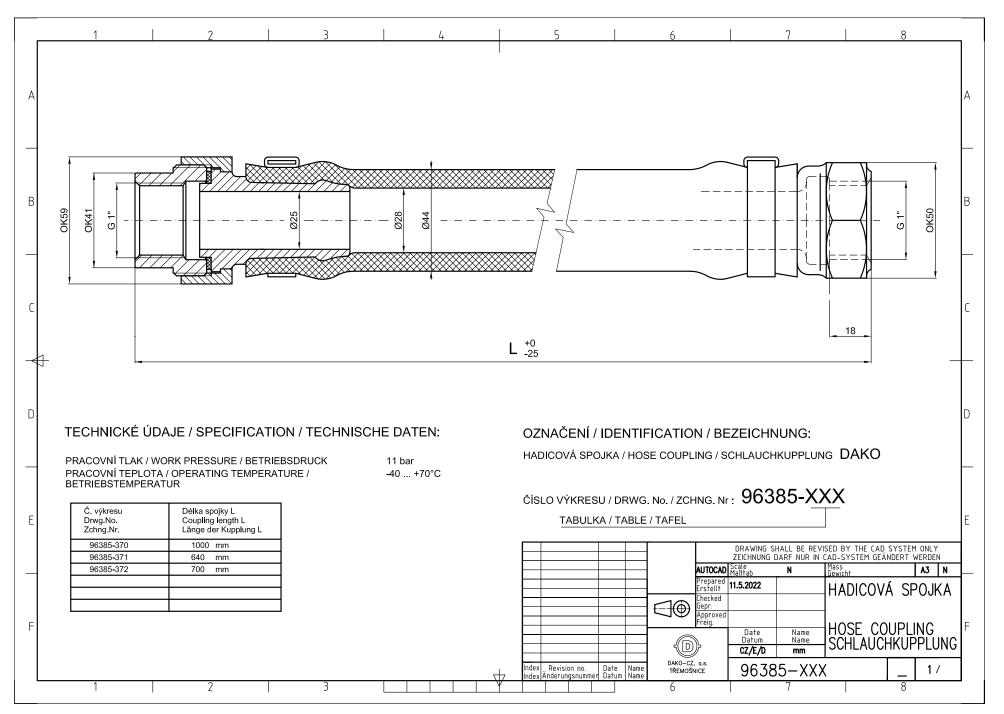


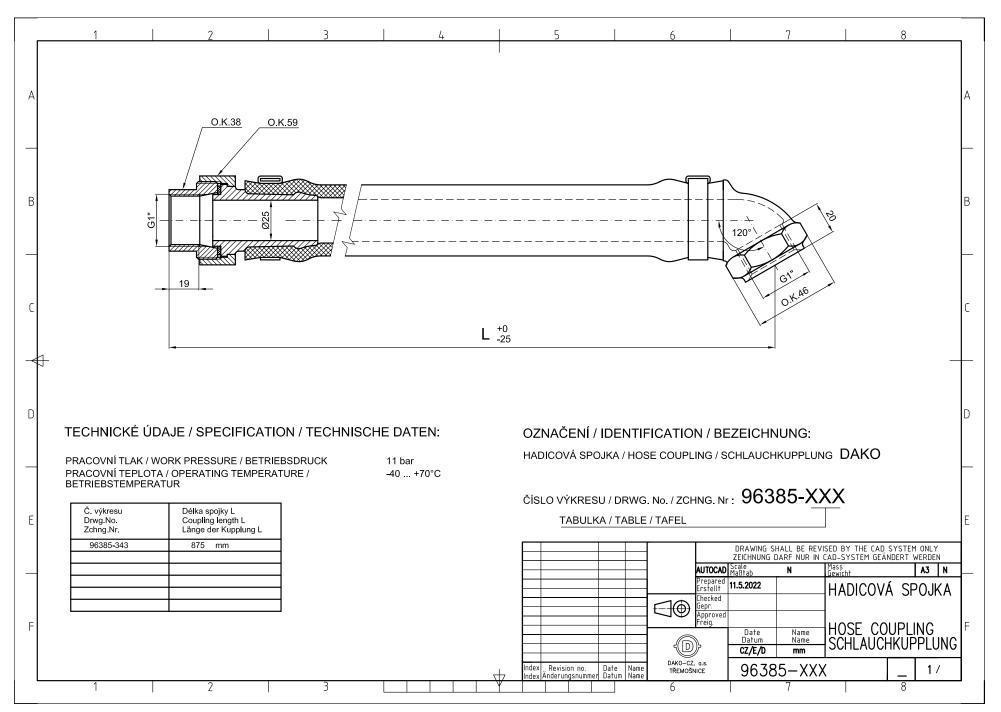

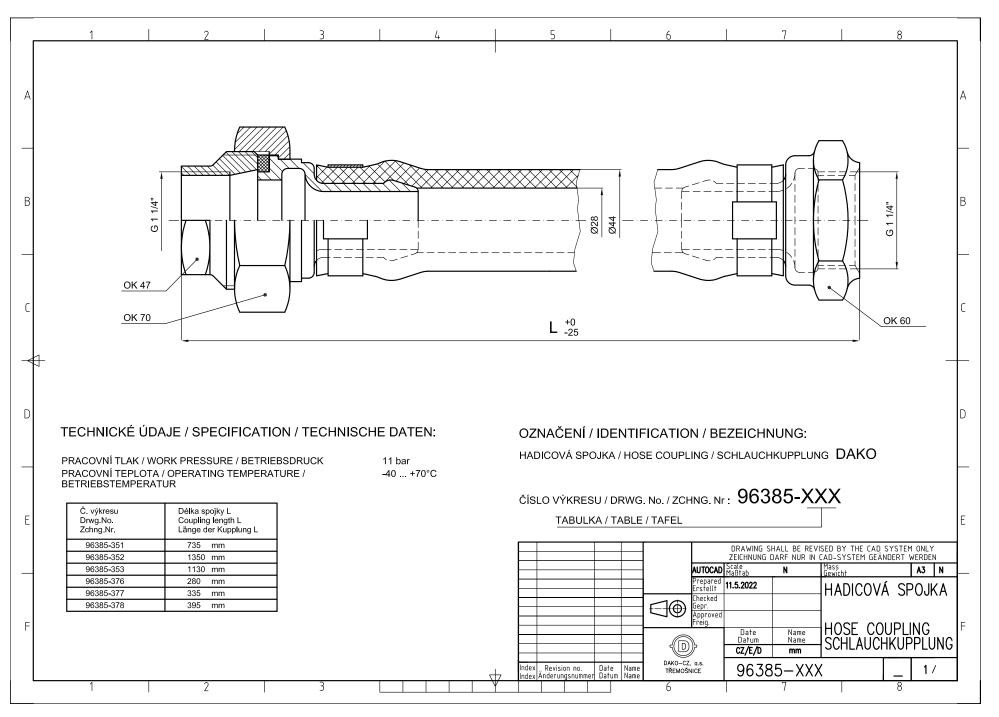

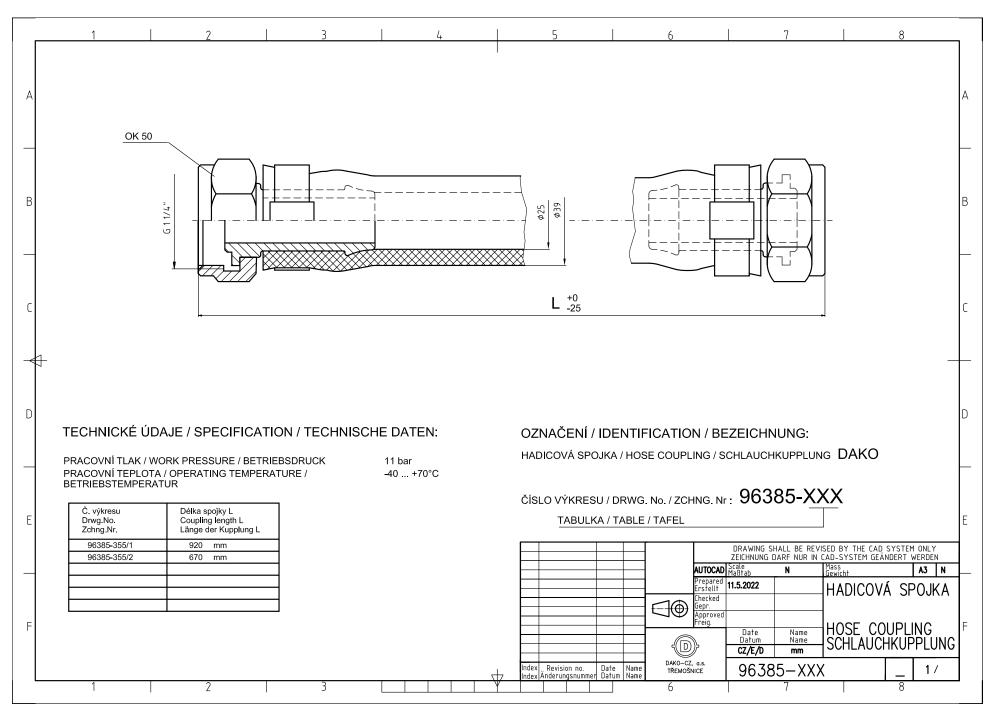

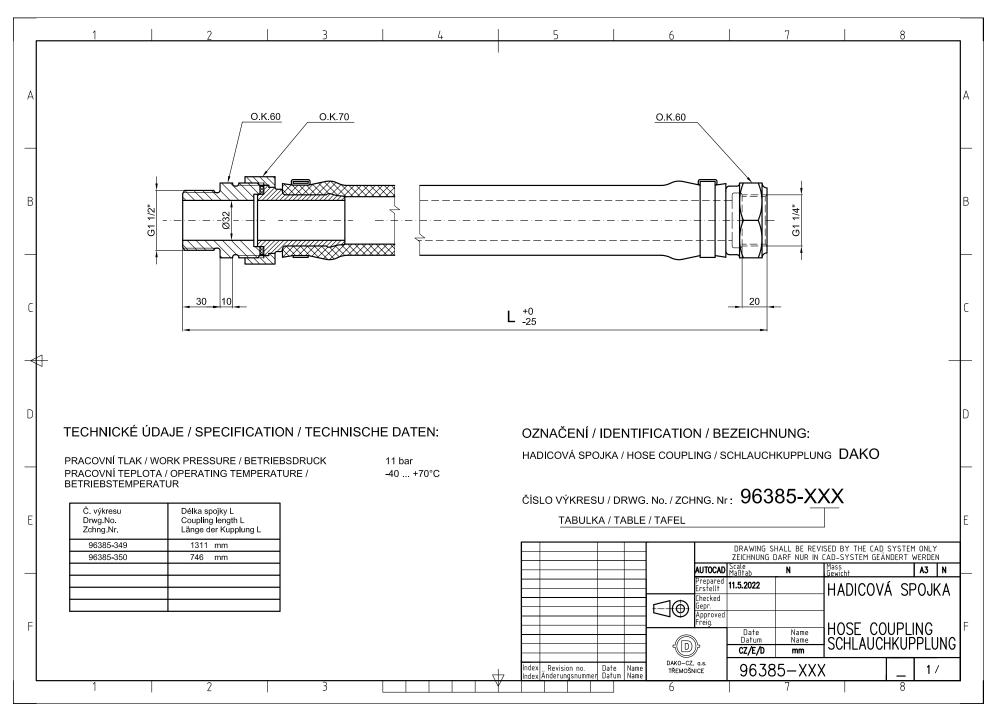


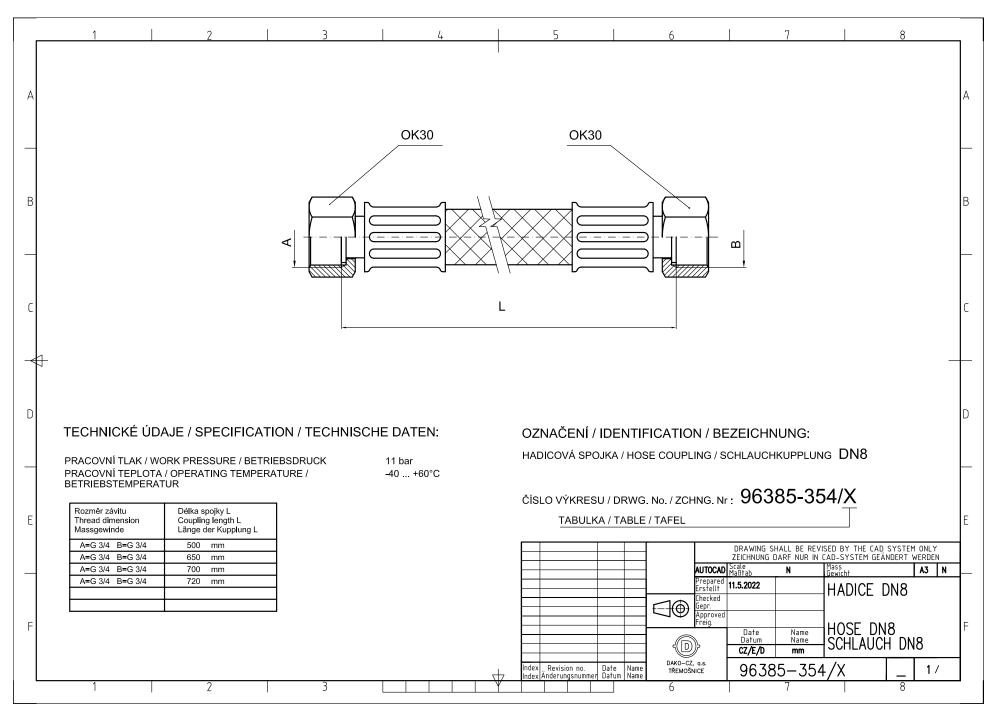

## 2. COUPLING COCKS DAKO KK

2.1 Coupling cock DAKO KK 1 ¼" - left design
2.2 Coupling cock DAKO KK 1 ¼" - right design
2.3 Coupling cock DAKO KK 1" - left design
2.4 Coupling cock DAKO KK 1" - right design



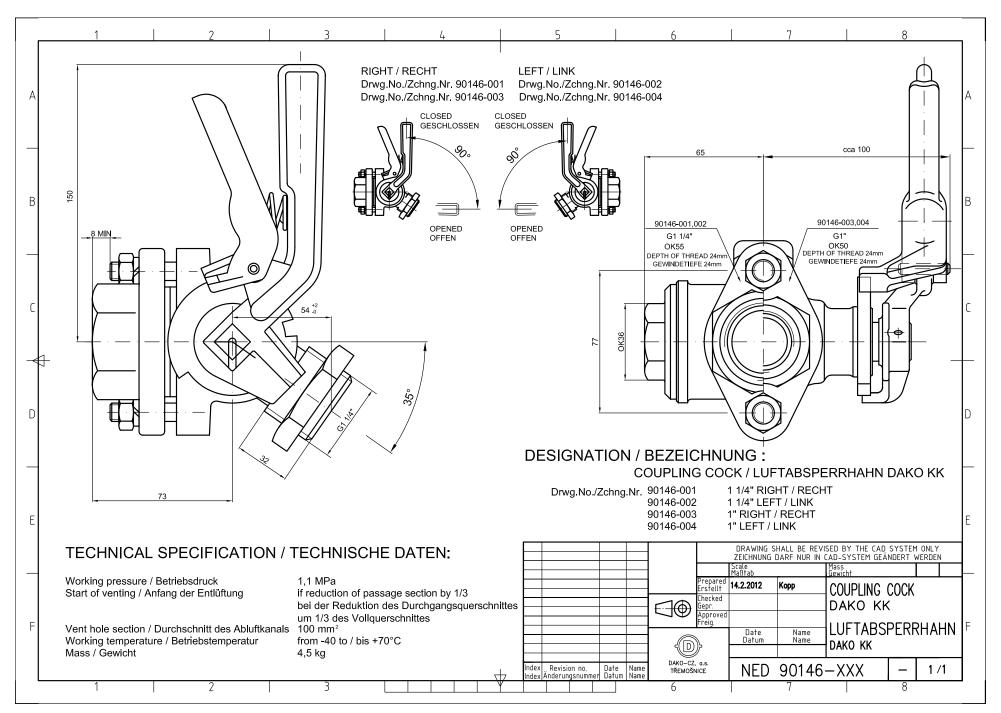



## **3. CHANGE OVER DEVICES DAKO**


3.1 Change over device DAKO G-P3.2 Change over device DAKO "Load - Empty"3.3 Change over device DAKO "On - Off"



**(D)** LOCOMOTIVE - **(D)** FREIGHT - **(D)** COACH - **(D)** MAINTENANCE - **(D)** XMU

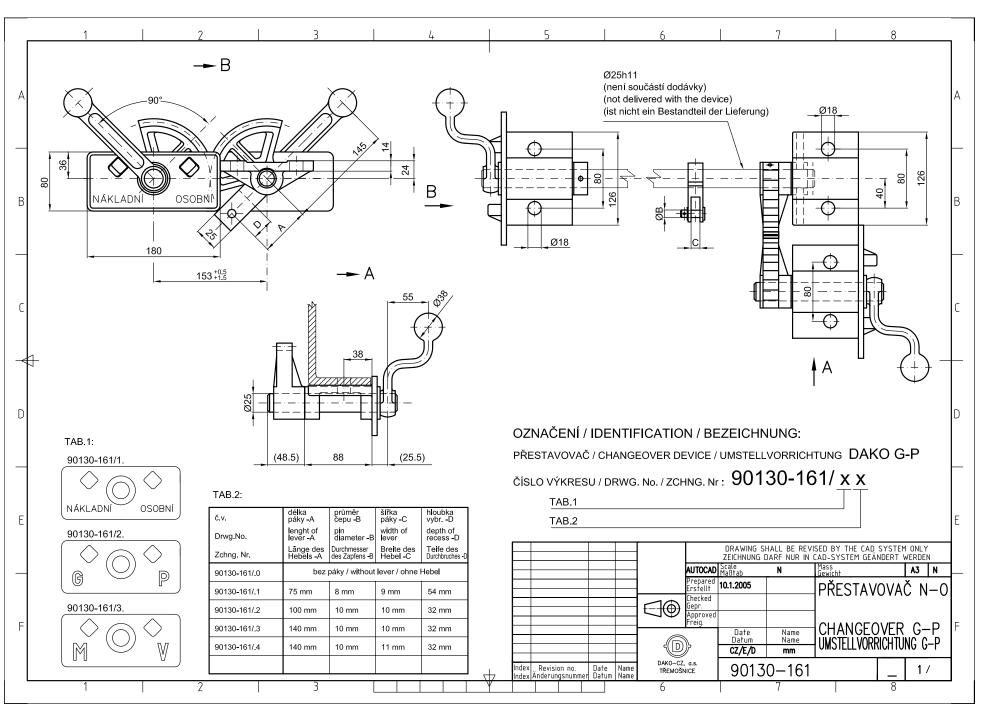

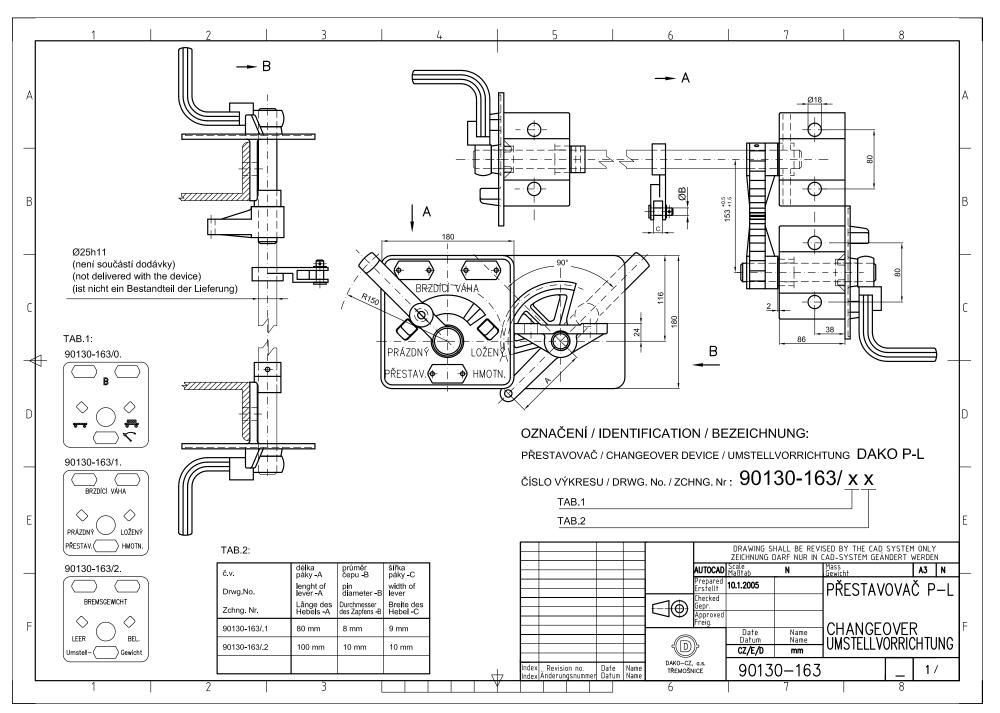

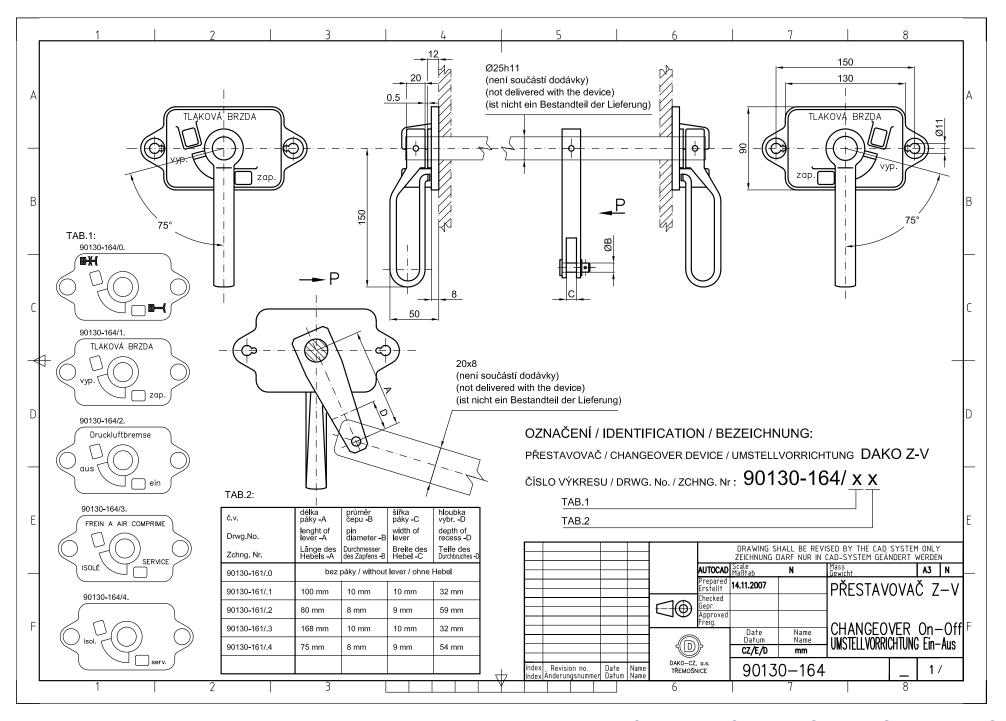


## 4. LOAD WEIGHING VALVE DAKO SL2 + GUIDING PLATES


4.1 Load weighing valve DAKO SL24.2 Load weighing valve DAKO SL24.3 Guiding plate









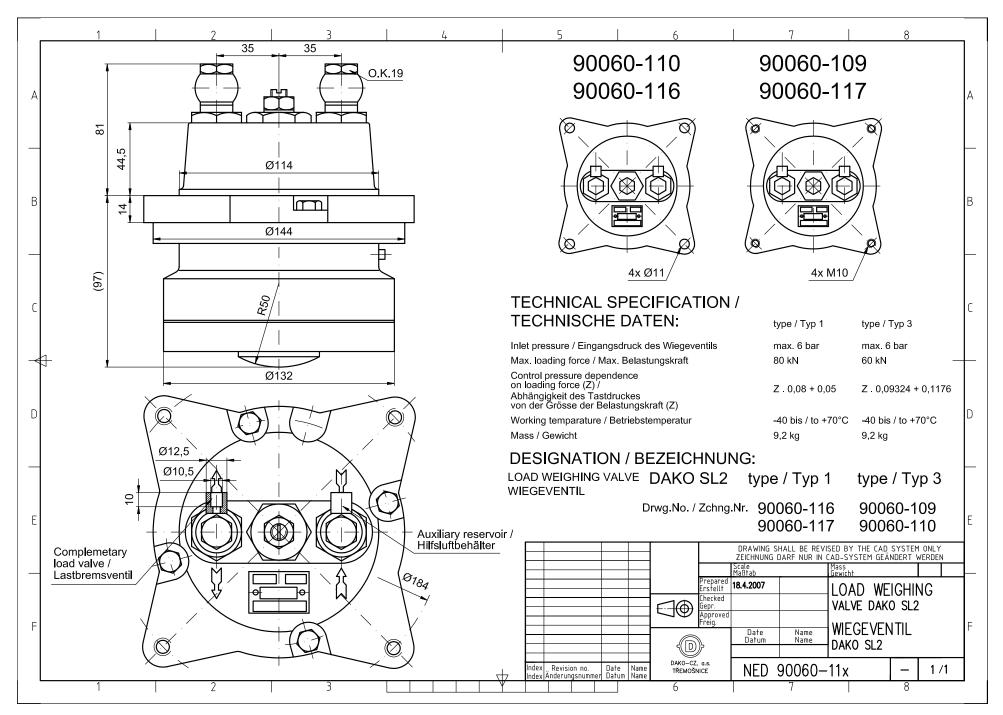

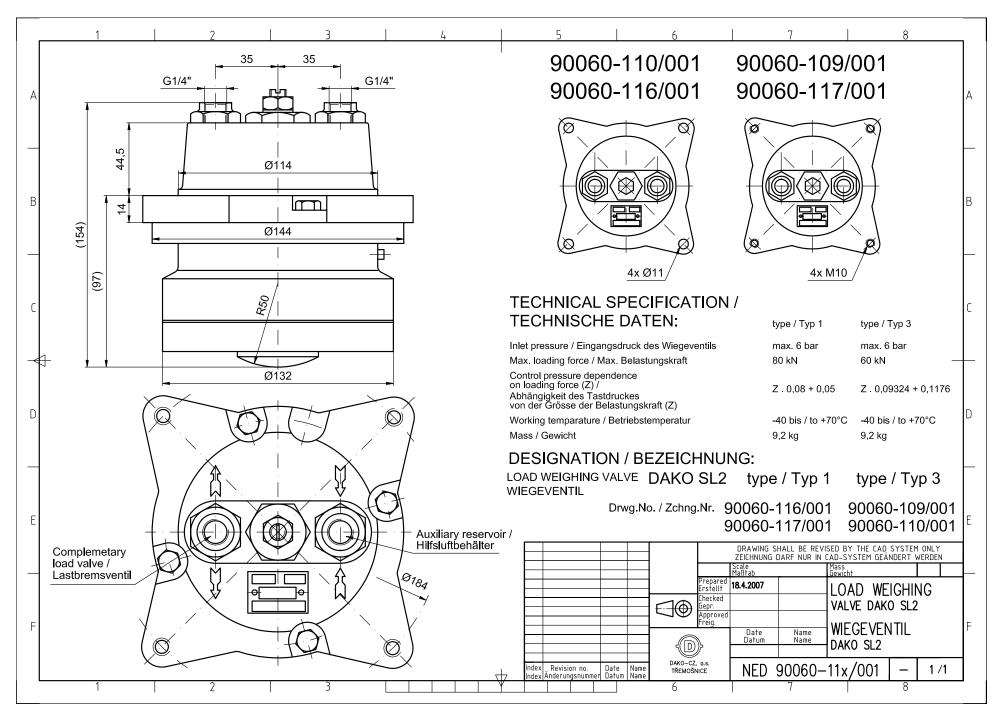

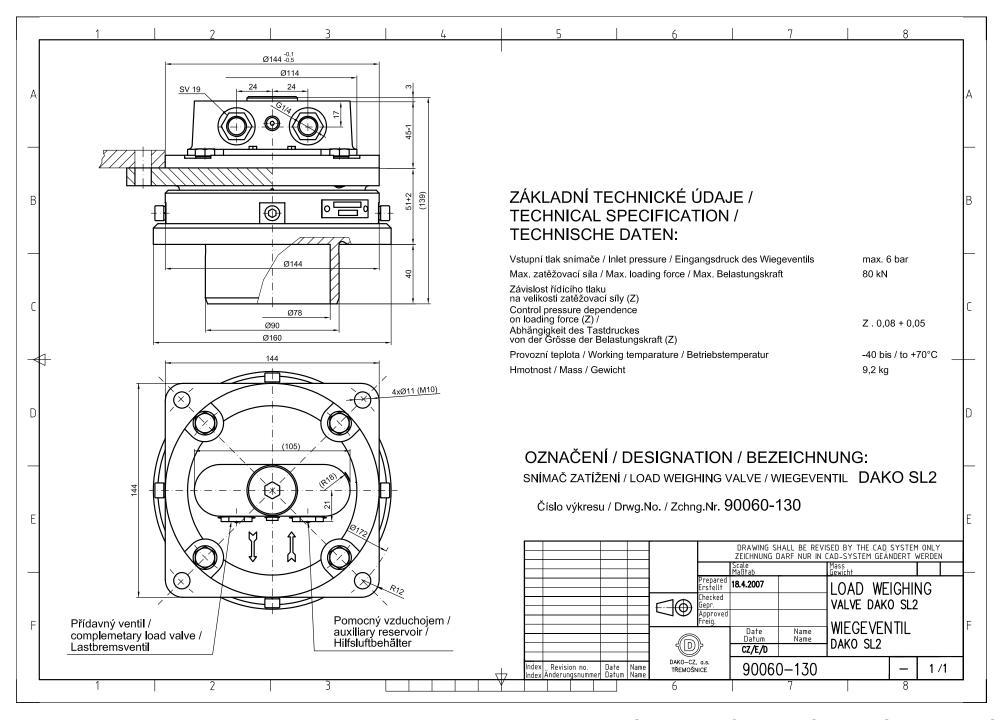

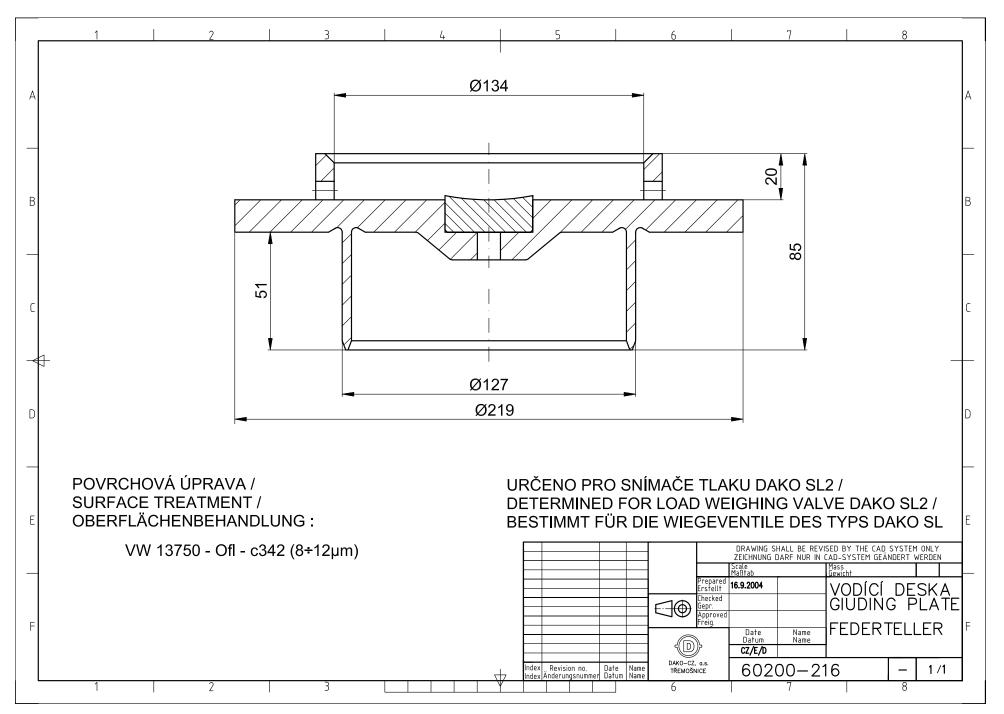



### **5. BRAKE CYLINDERS DAKO TB**


5.1 Brake cylinders DAKO TB without fulcrum bracket - 8", 9", 10", 12", 14", 16" 5.2 Brake cylinders DAKO TB with fulcrum bracket - 8", 9", 10", 12", 14", 16"






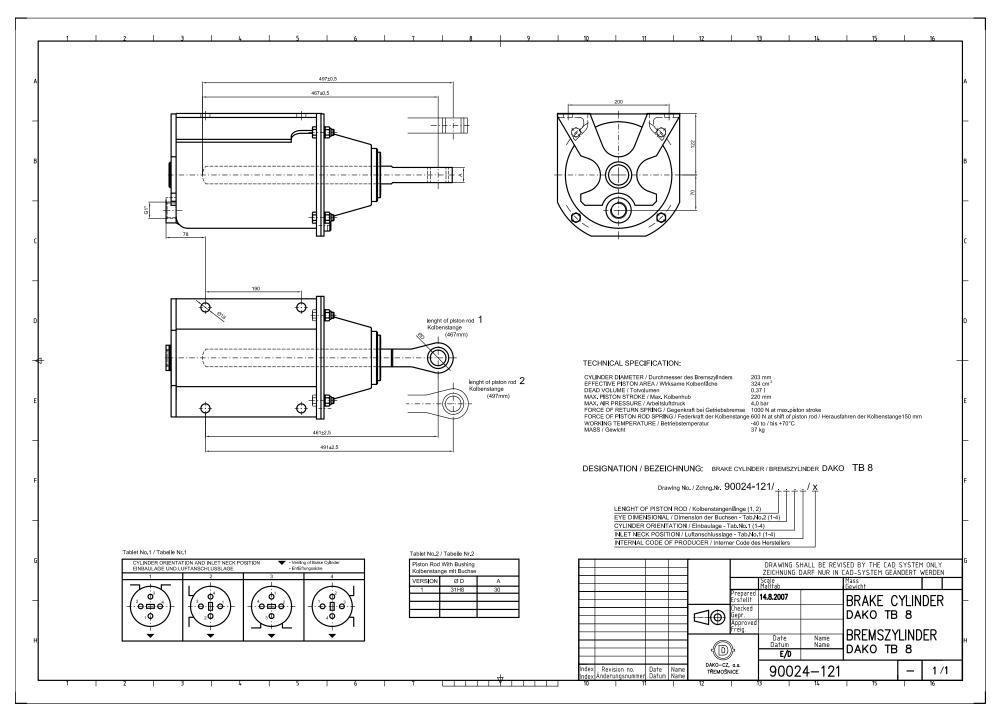


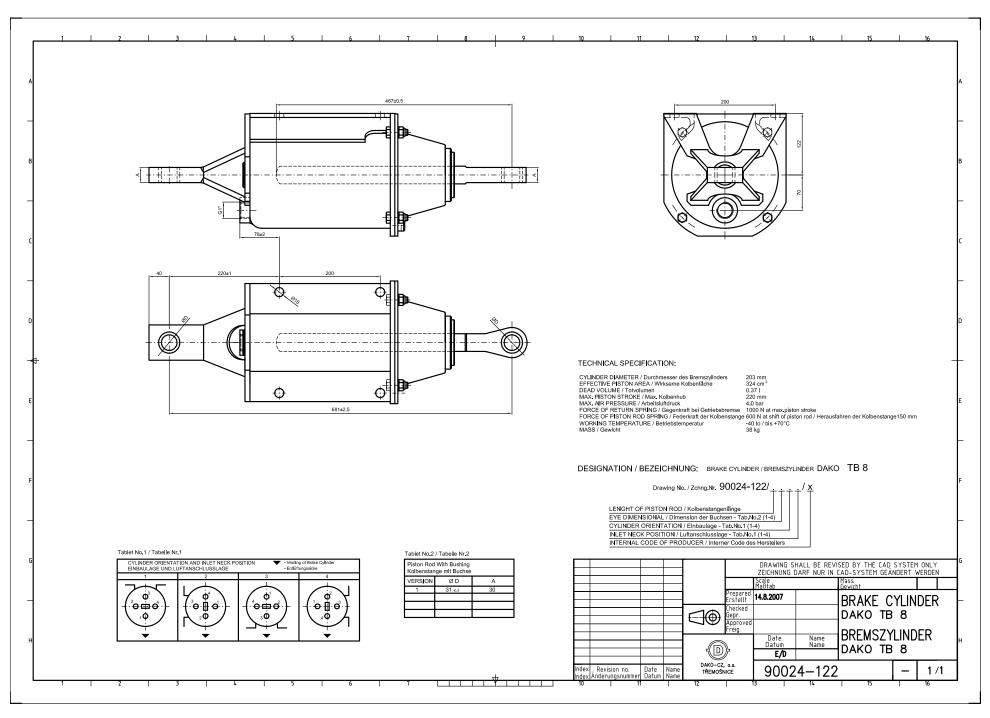


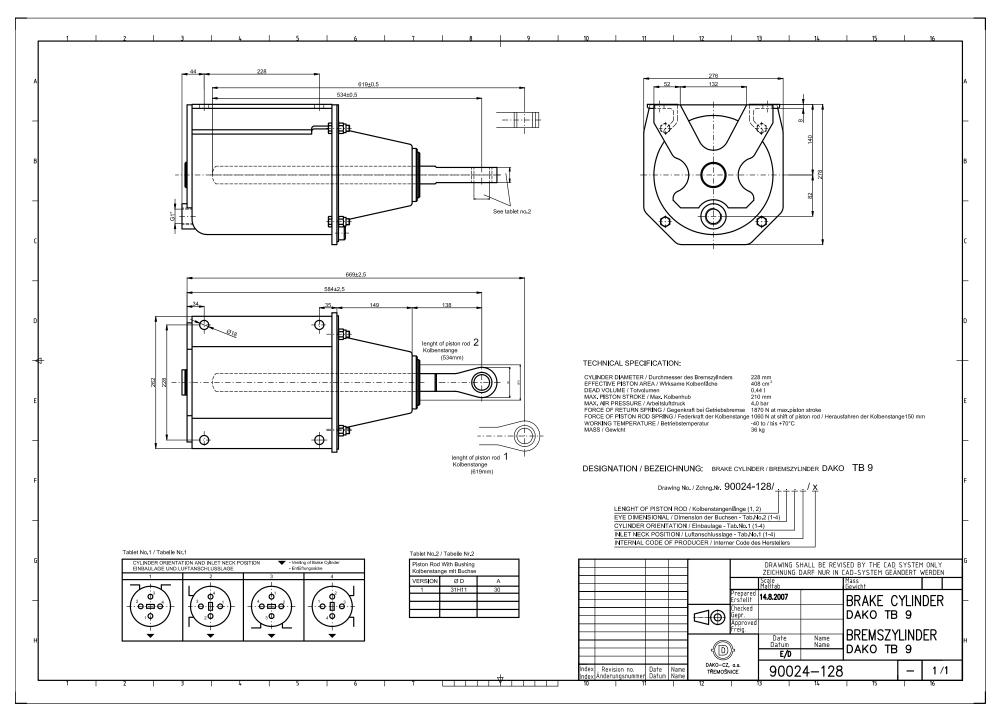



(D) LOCOMOTIVE - (D) FREIGHT - (D) COACH - (D) MAINTENANCE - (D) XMU SOUTIONS

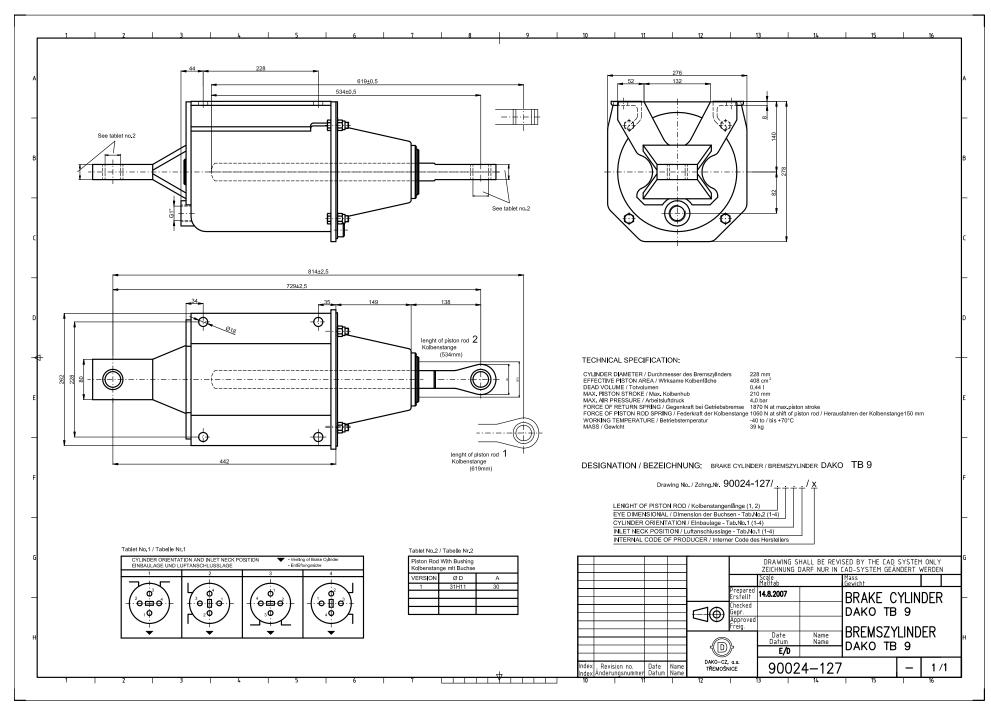


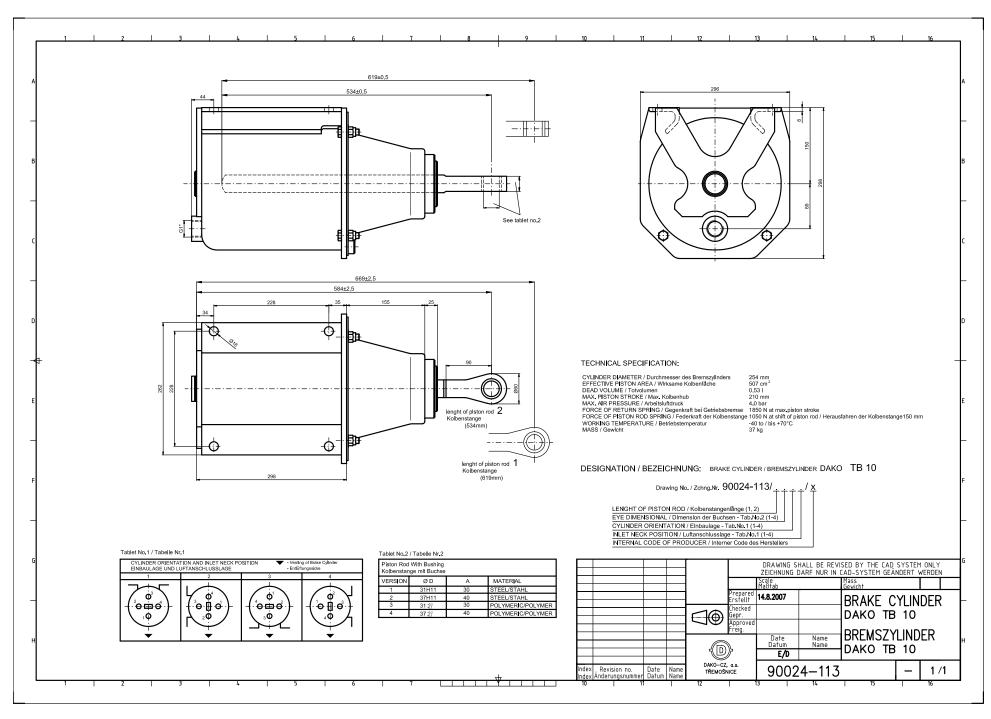


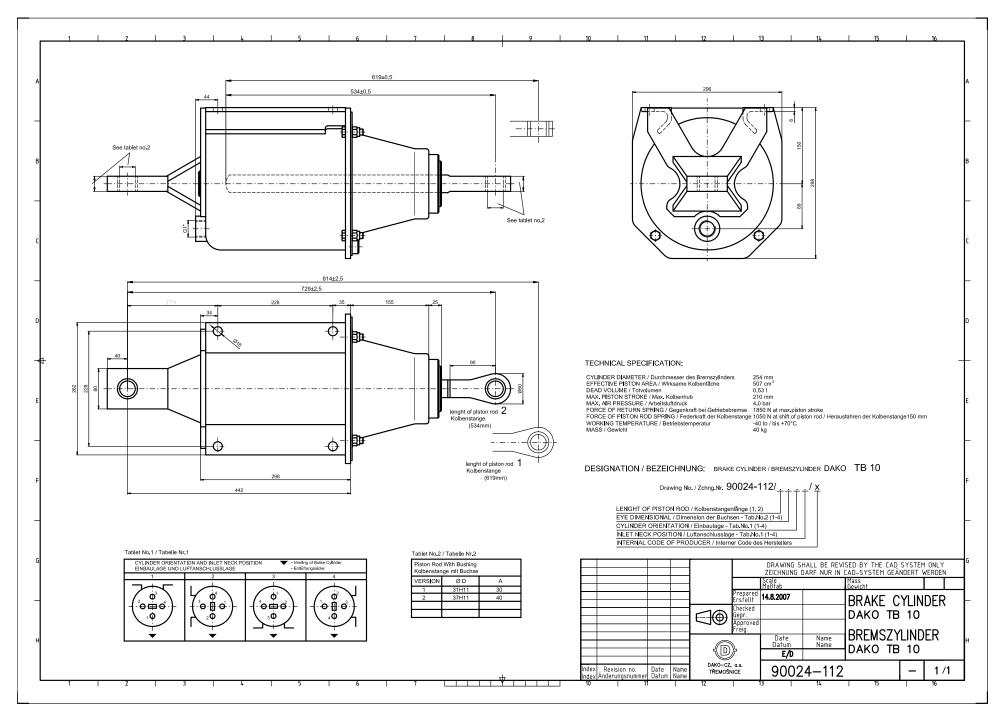


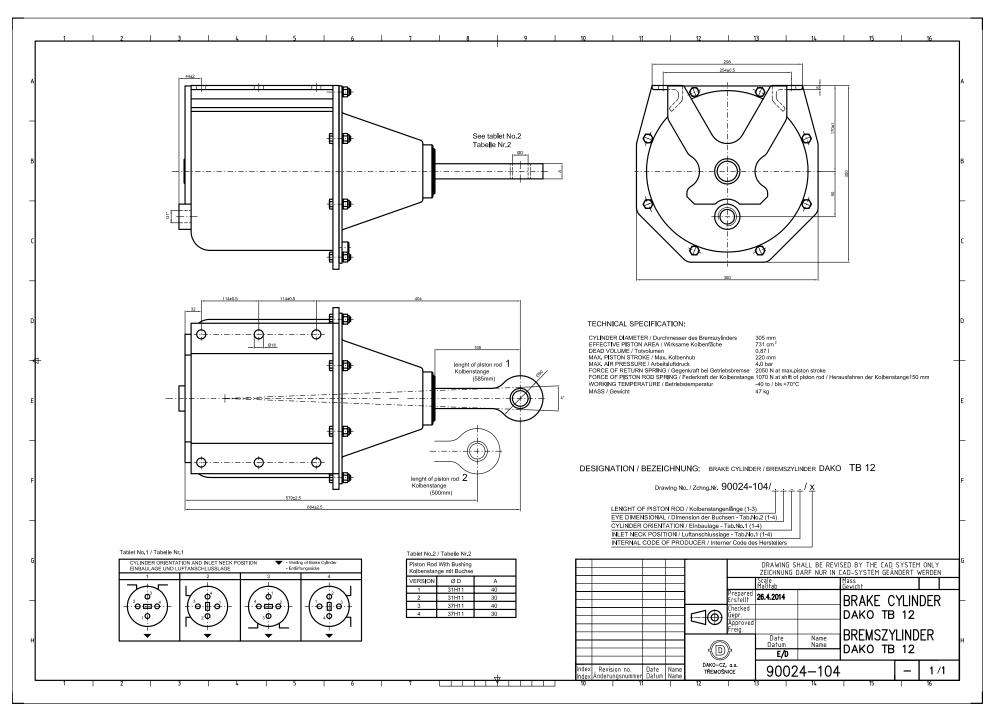


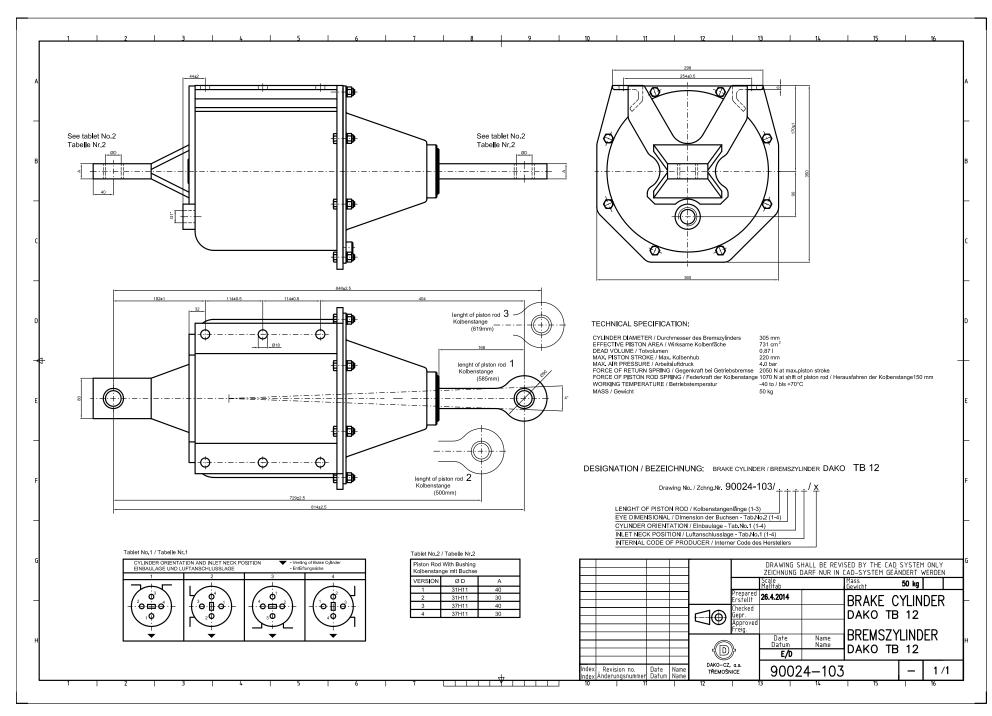

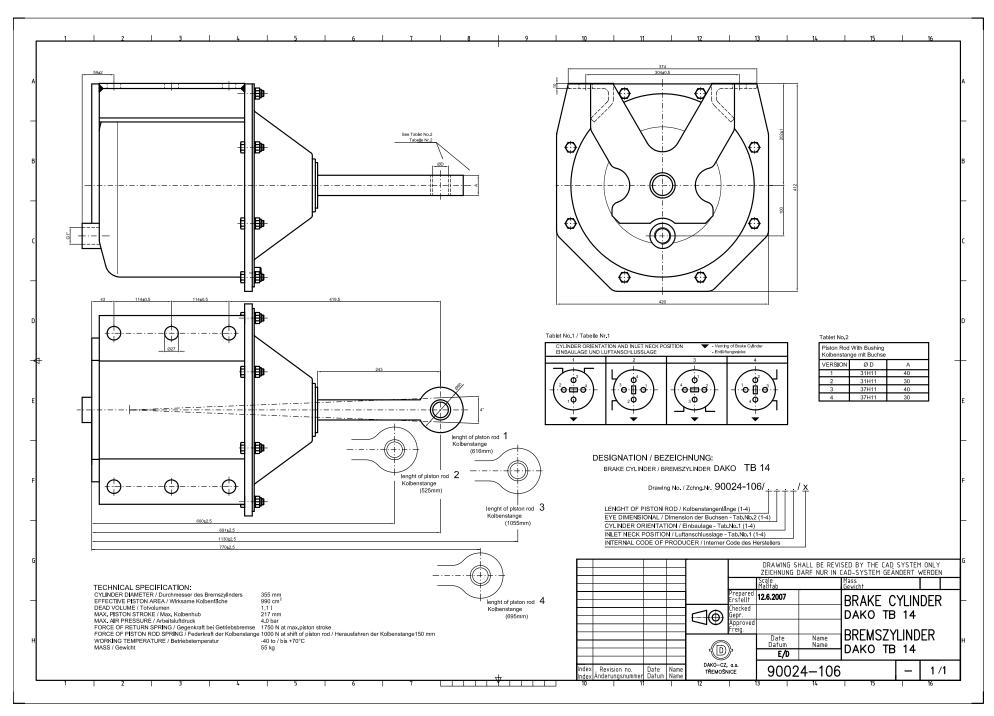

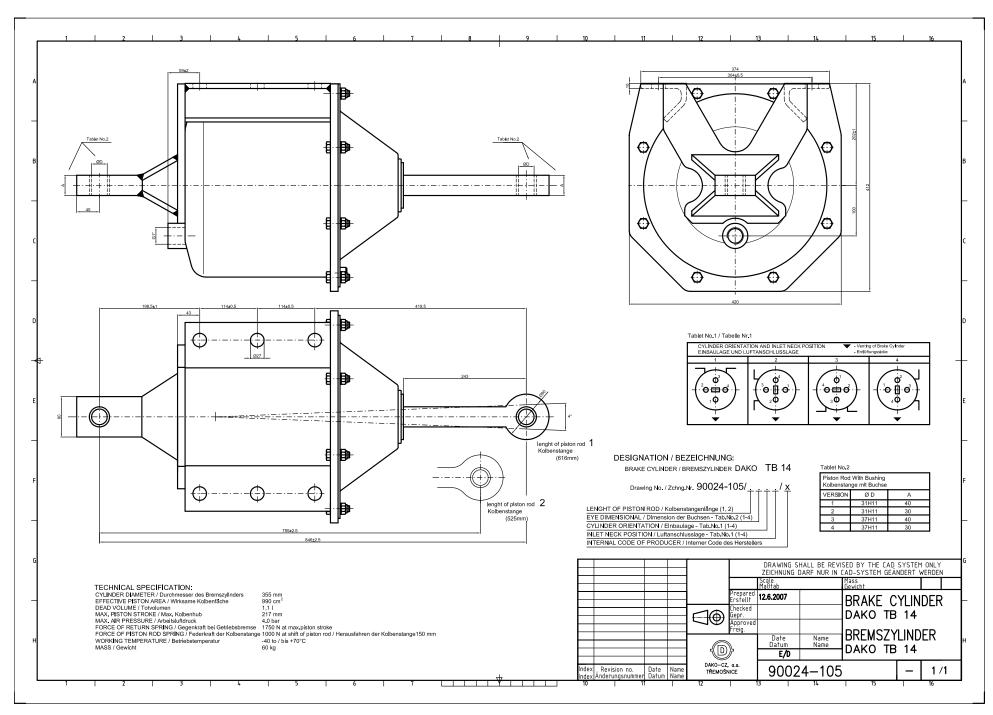

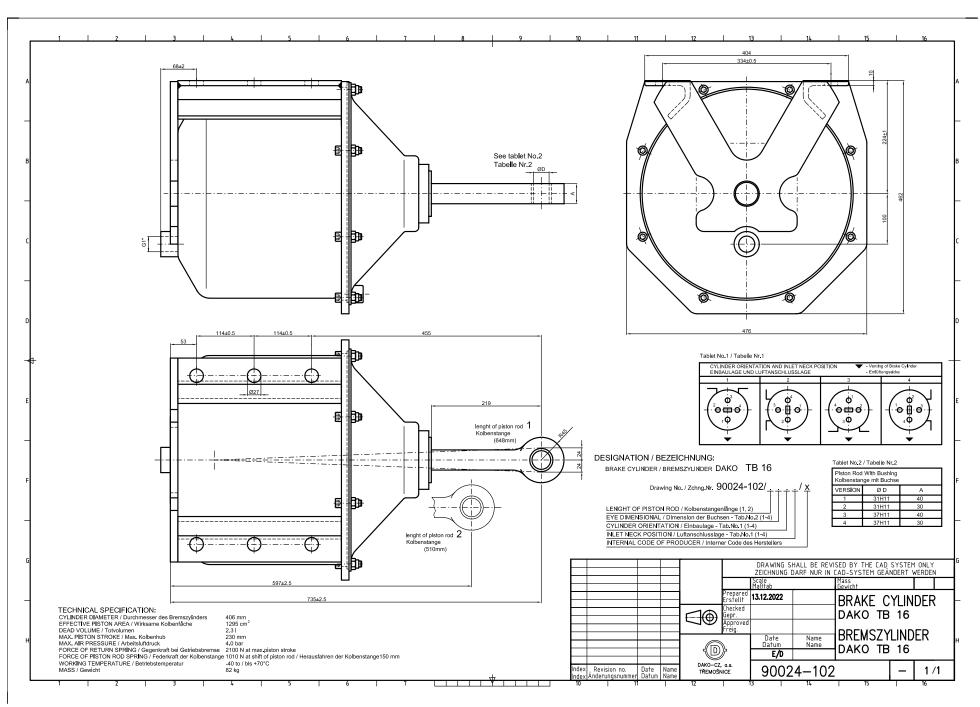


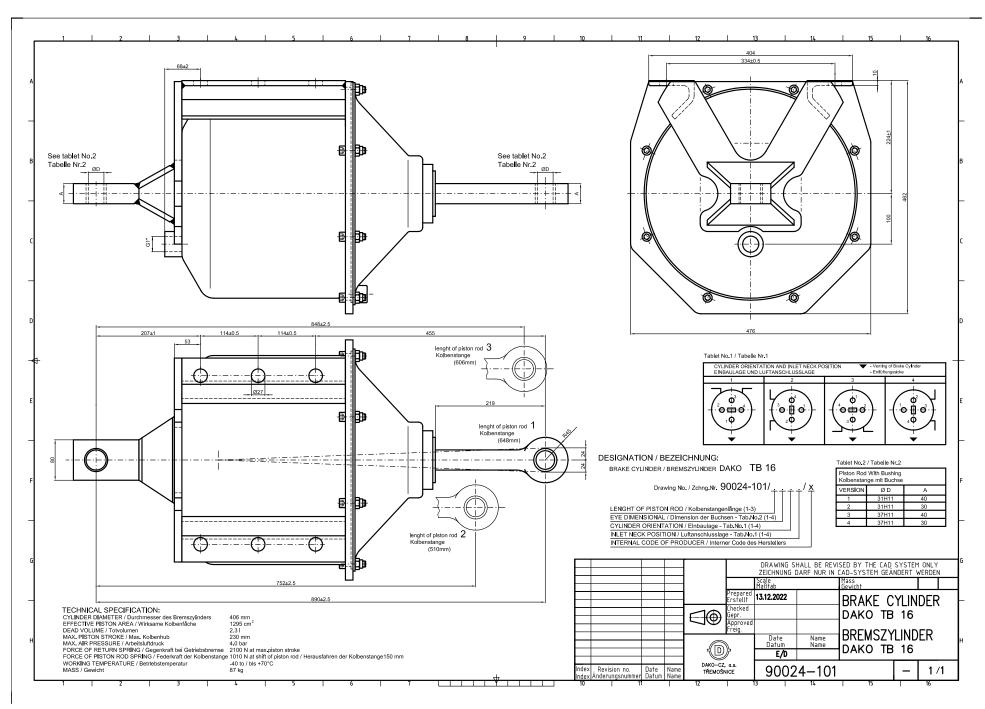


### 6. DISC BRAKE PAD HOLDERS

6.1 Disc brake pad holder 350  $\text{cm}^2$  – right and left design 6.2 Disc brake pad holder 400  $\text{cm}^2$  – right and left design




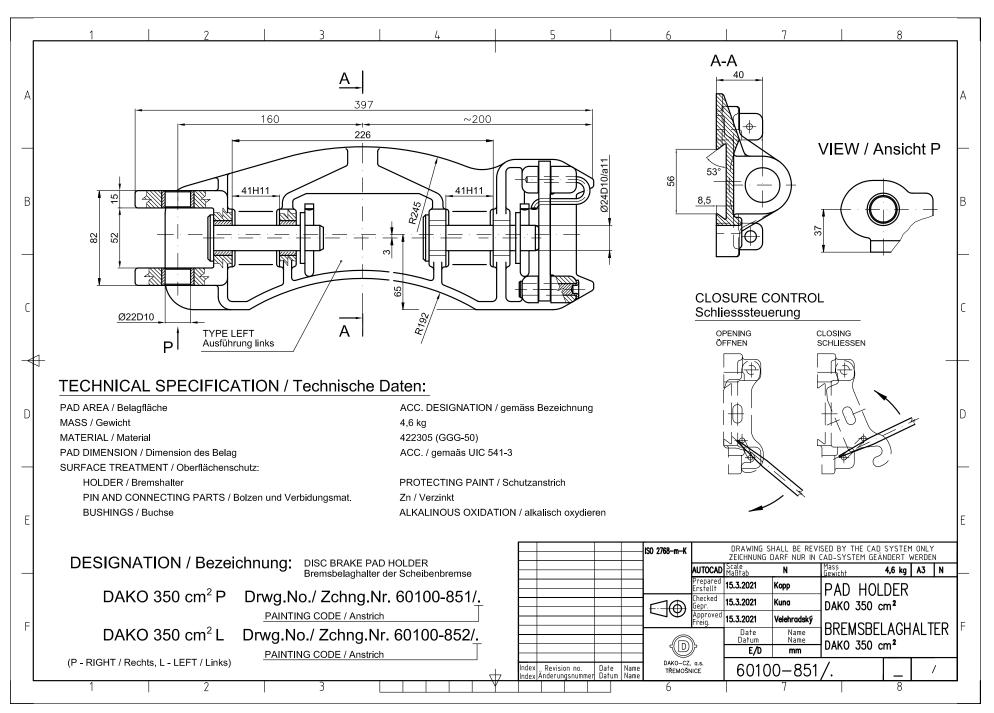


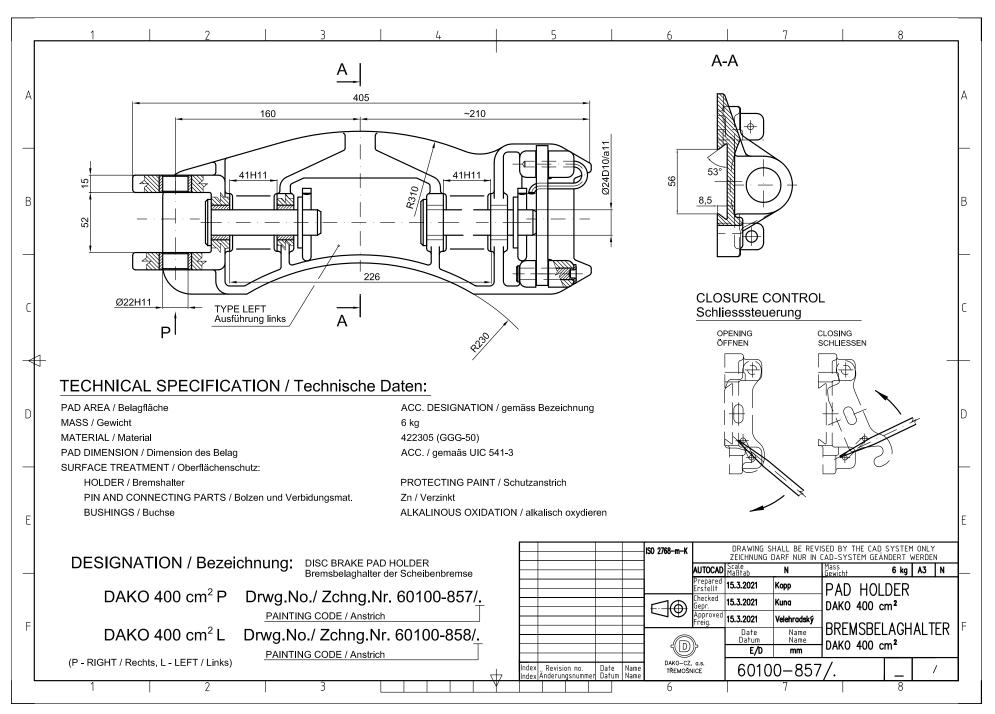


## 7. DIAGNOSTIC CONNECTORS


7.1 Diagnostic connector without nozzle -  $\frac{1}{4''}$ 7.2 Diagnostic connector without nozzle -  $\frac{1}{2''}$ 

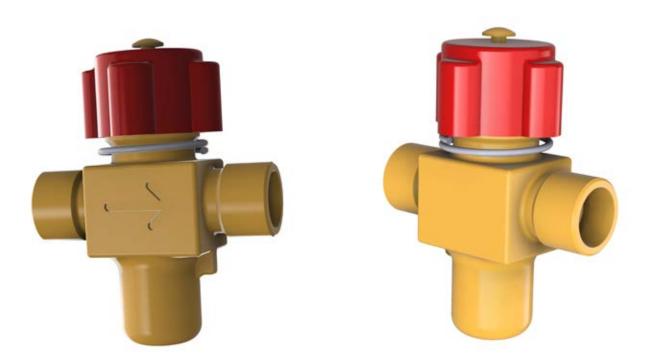

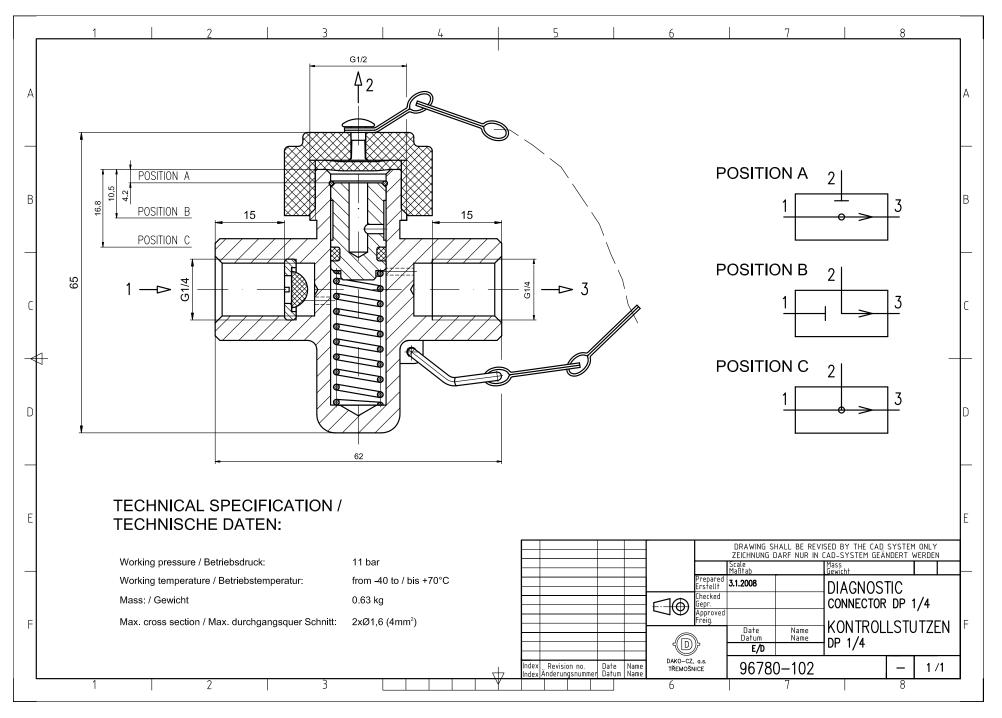


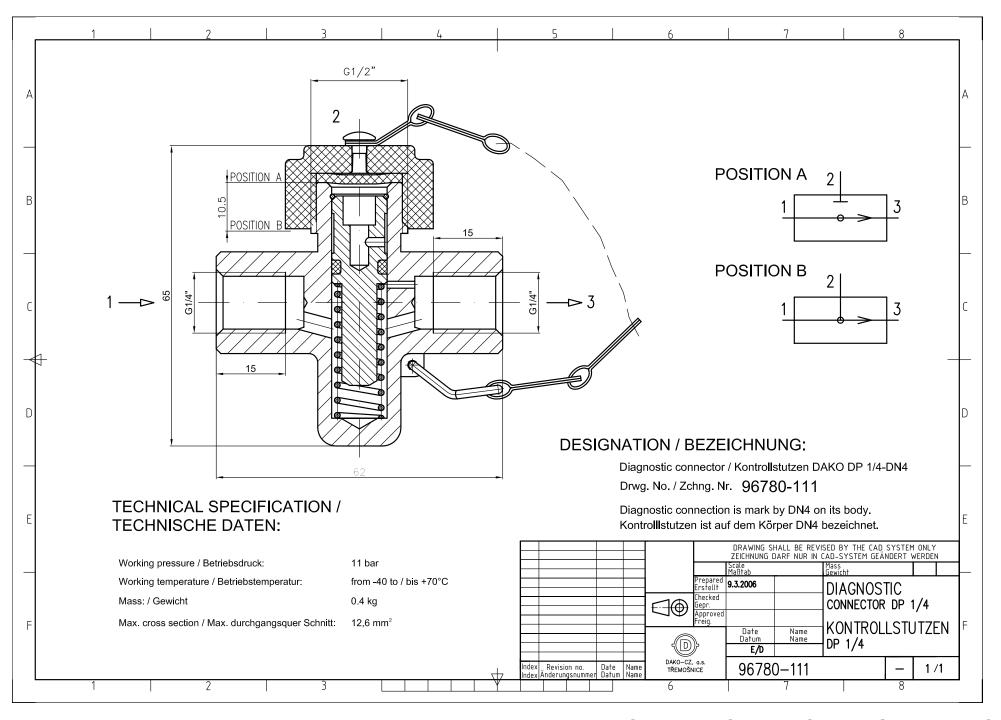

53

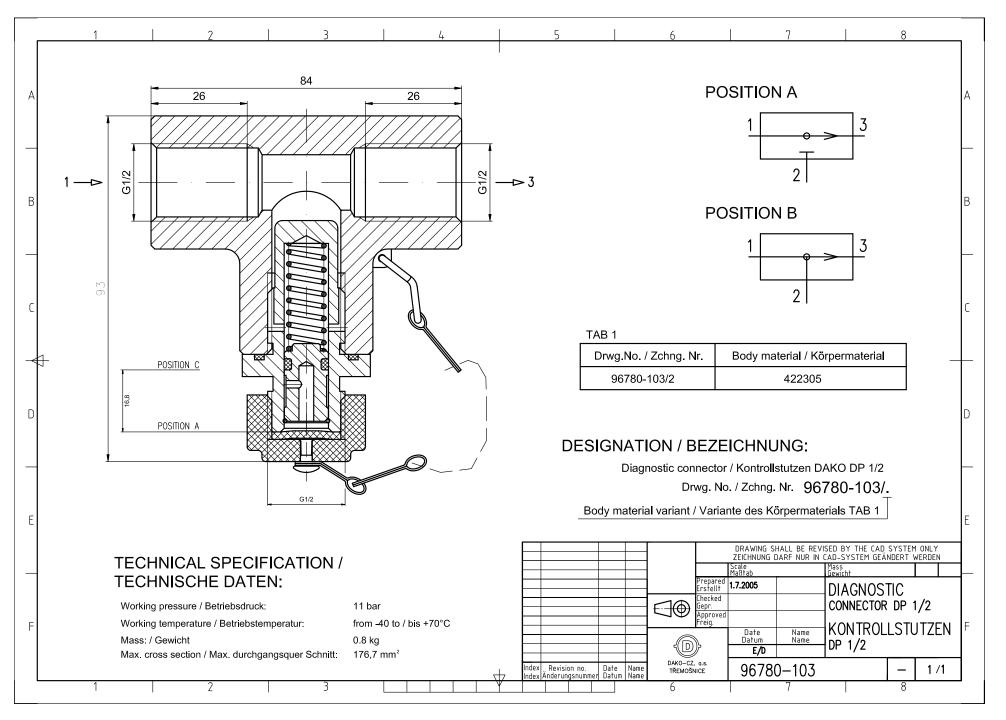


54

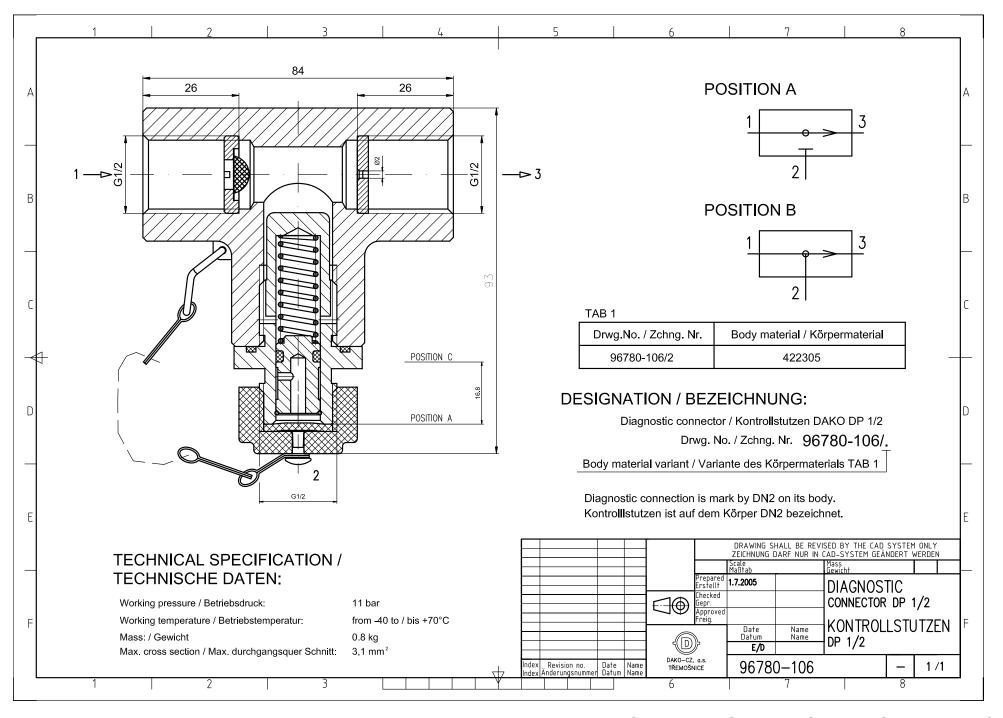



# 8. BRAKING INDICATORS


8.1 Two – window braking indicator 8.2 One – window braking indicator



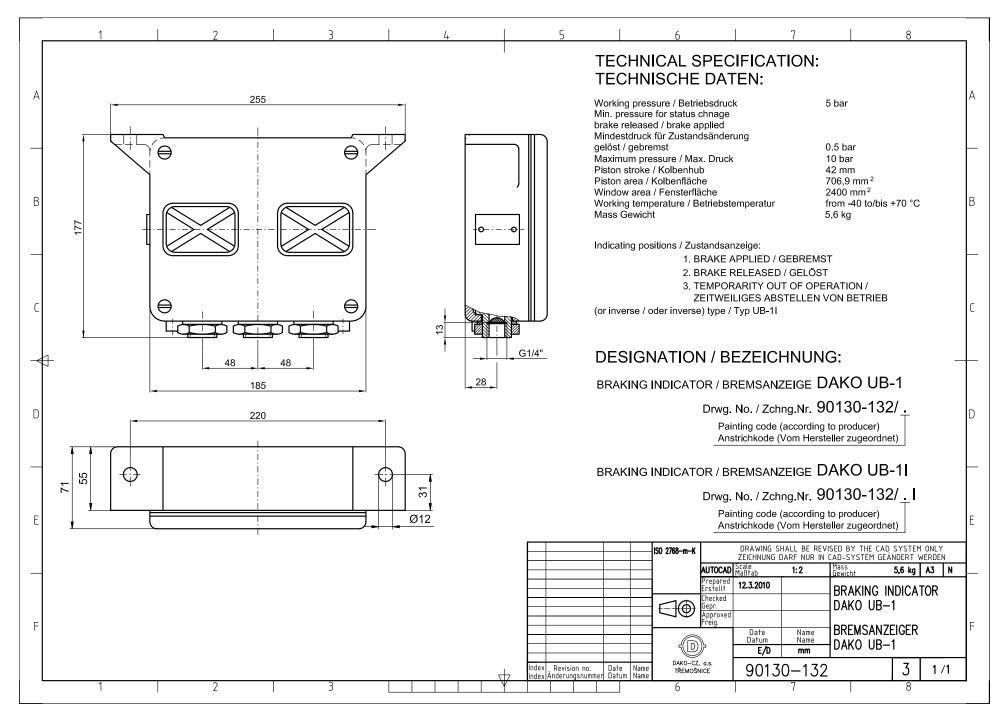


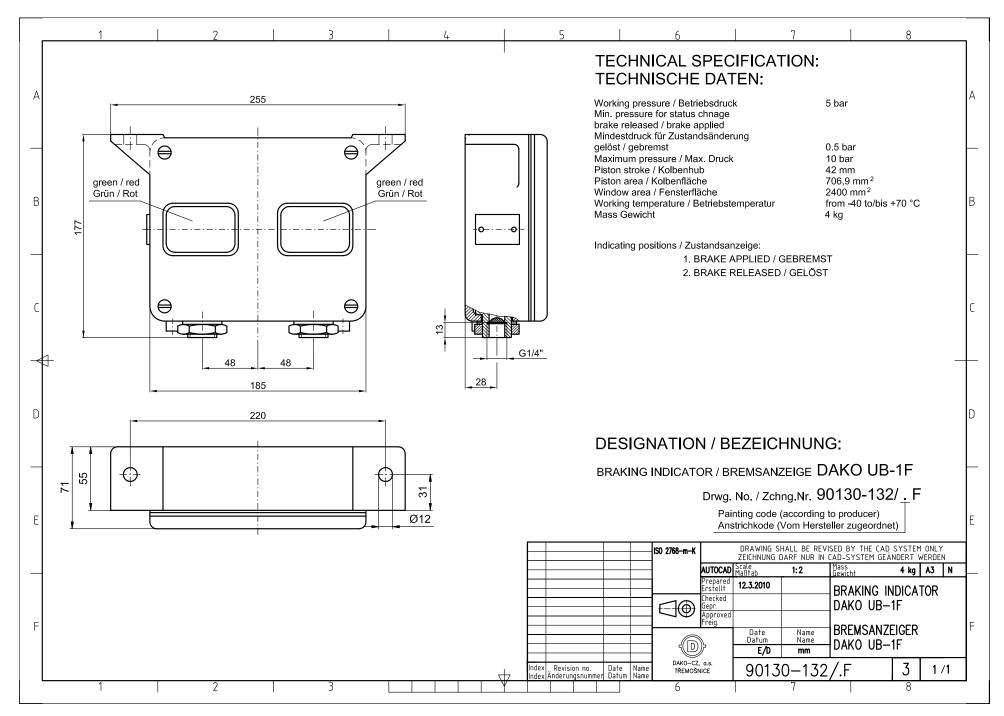


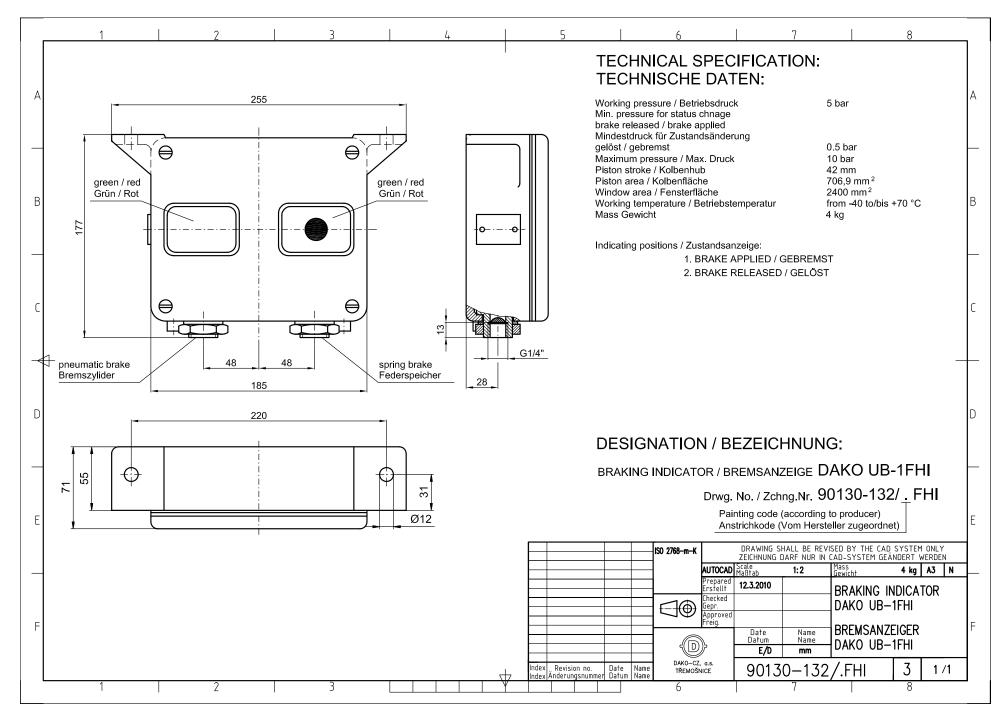


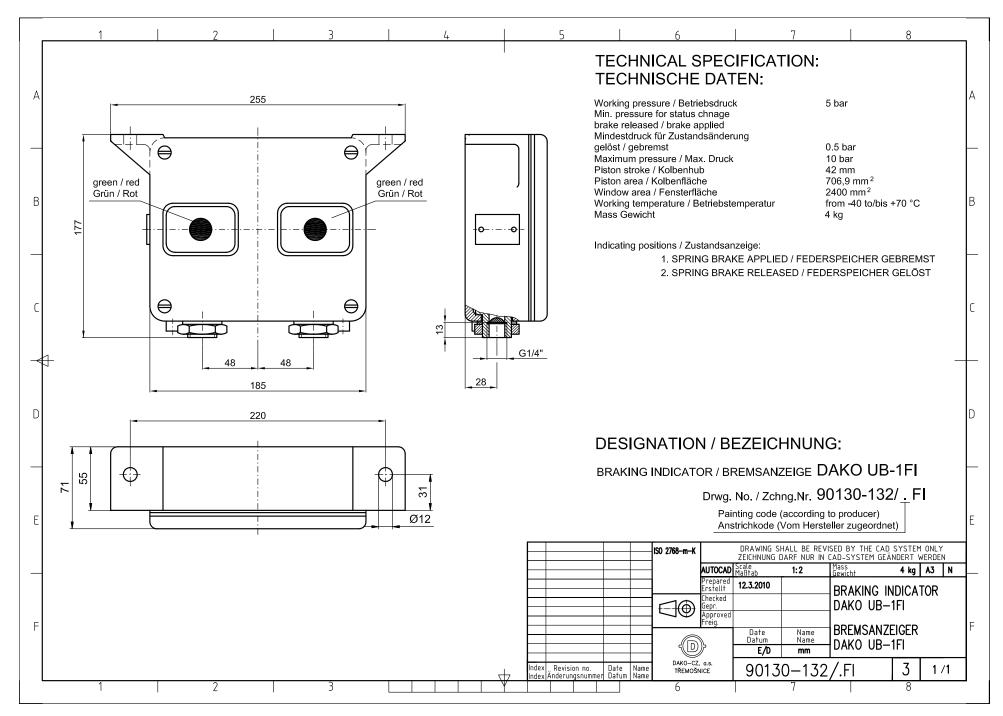


60

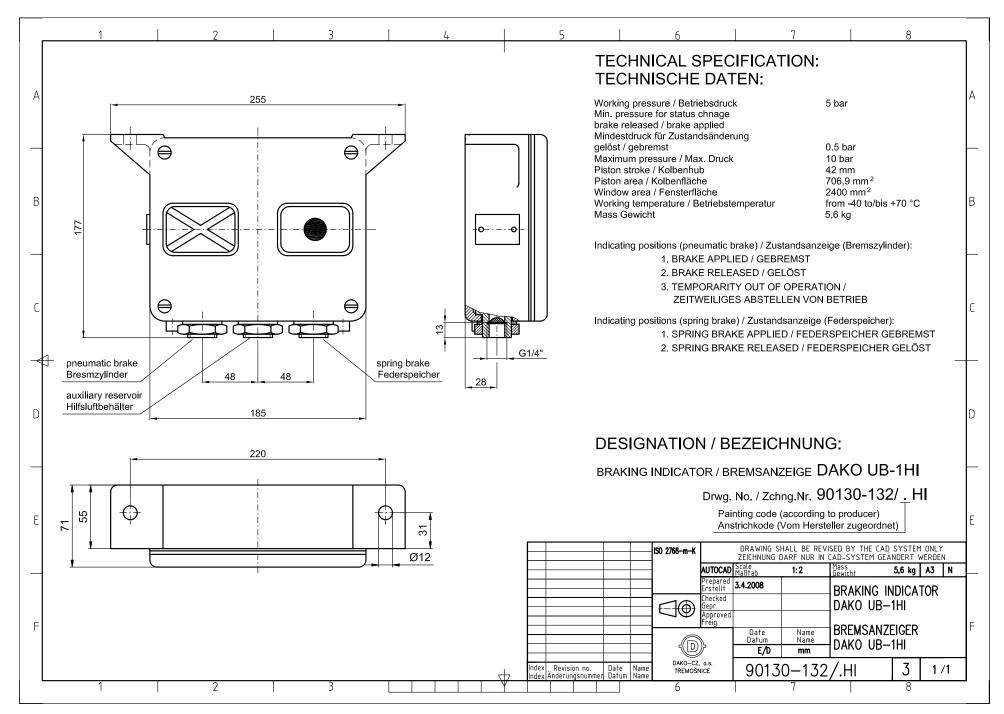

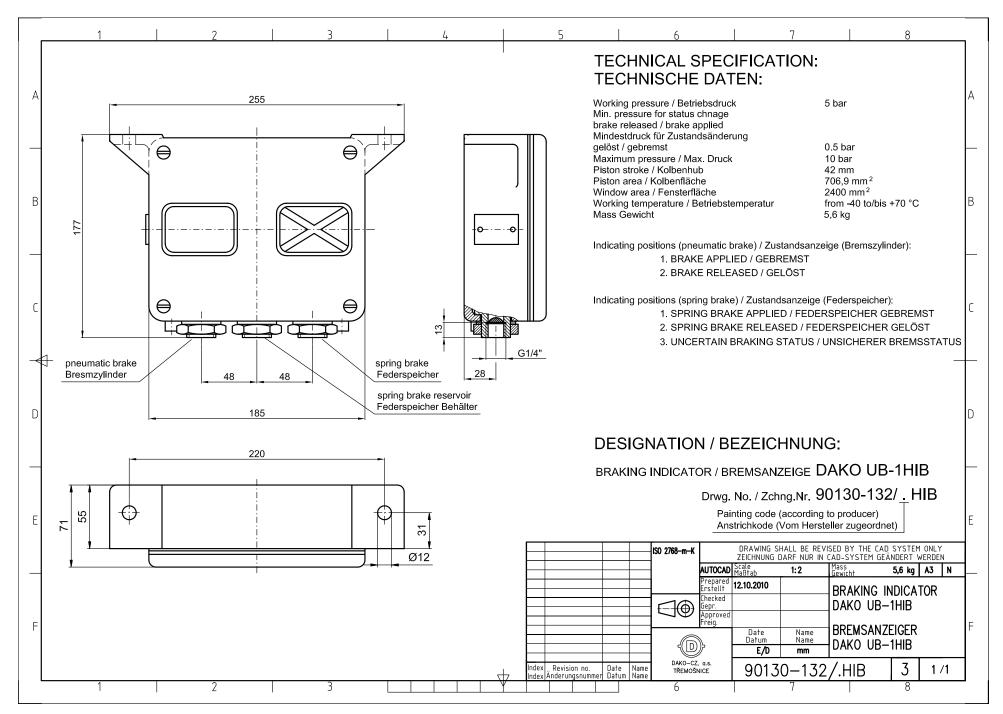

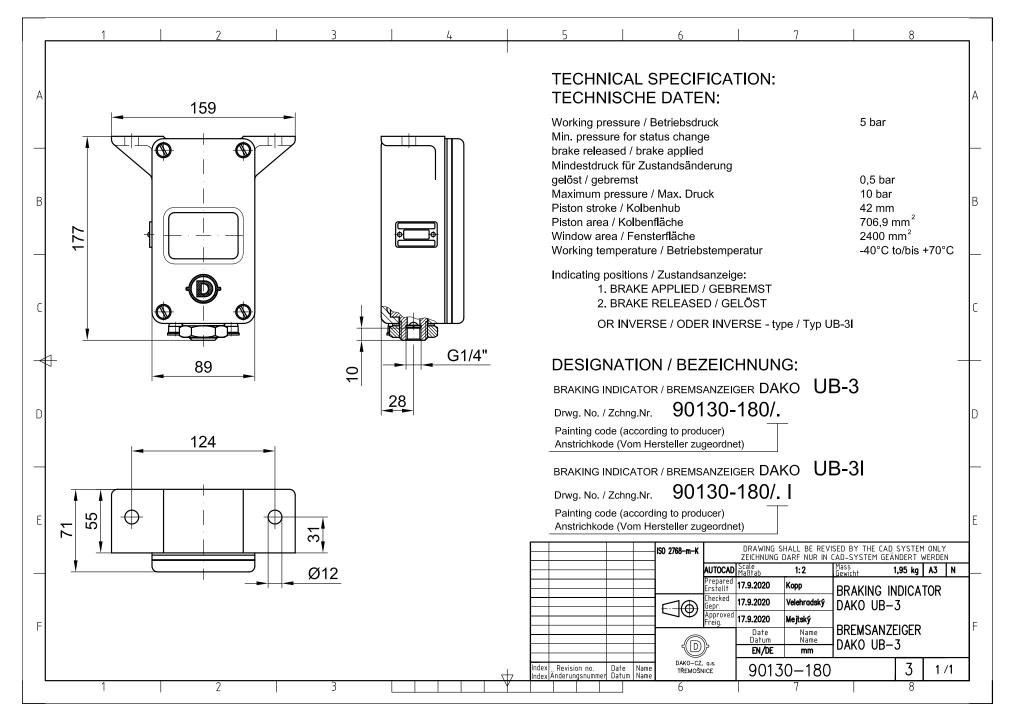


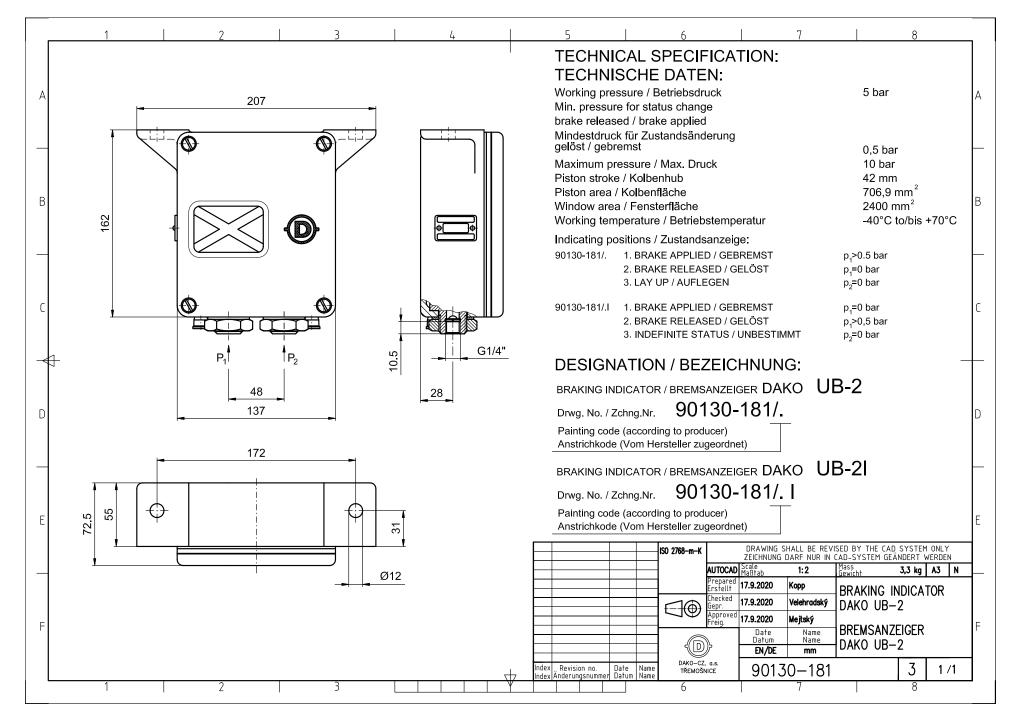



# 9. AIR FILTERS


9.1 Air filter G 3/8"
9.2 Air filter G 1/2"
9.3 Air filter <sup>3</sup>/<sub>4</sub>"



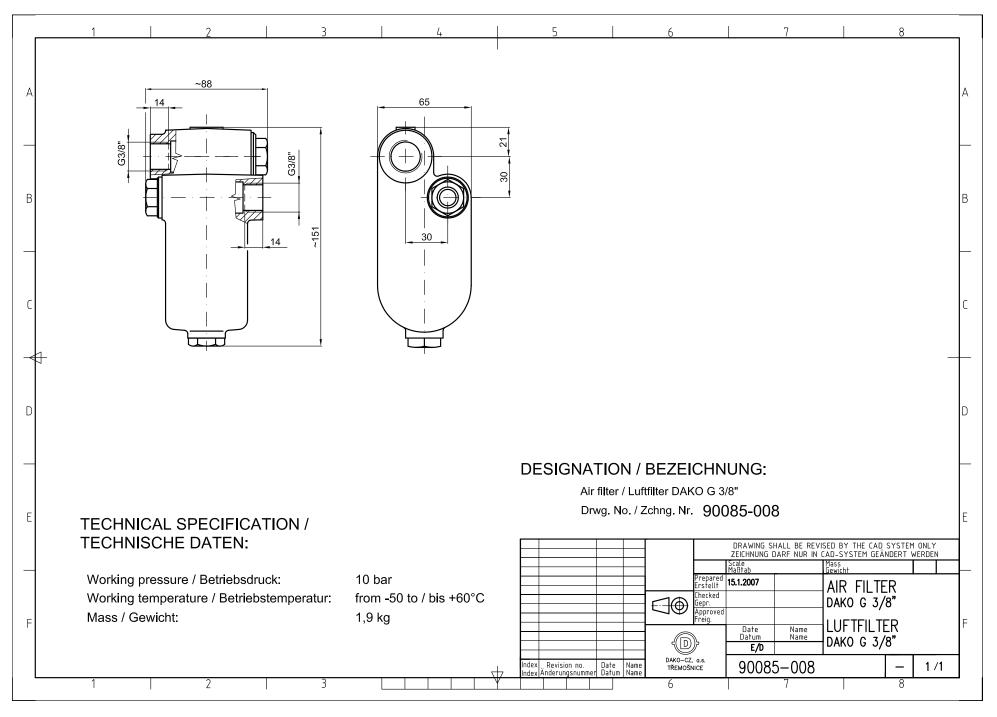

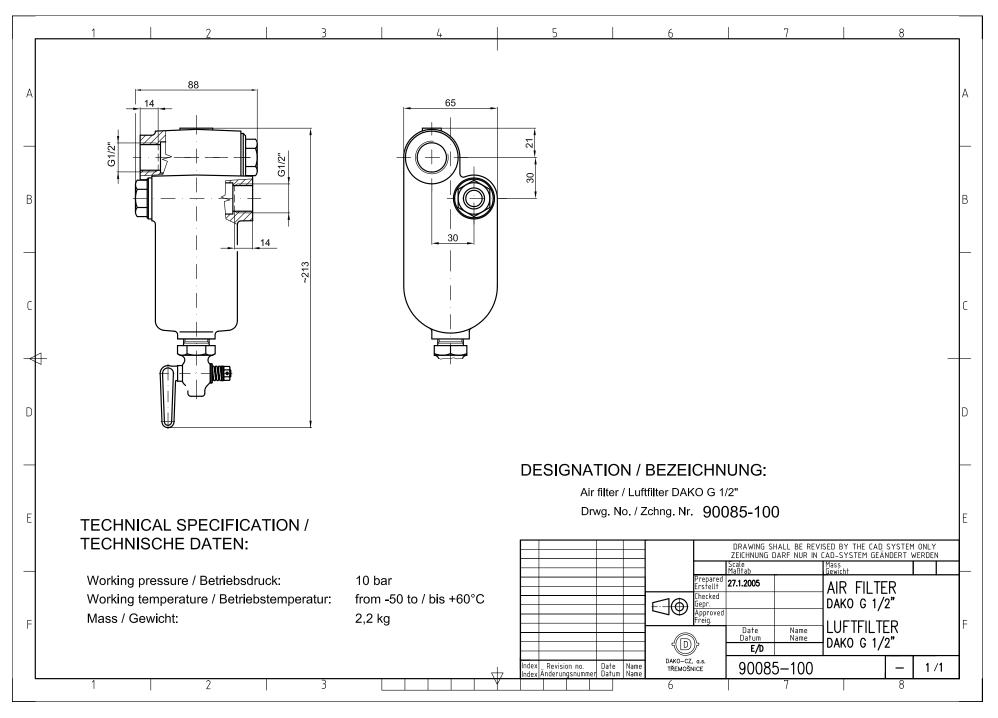

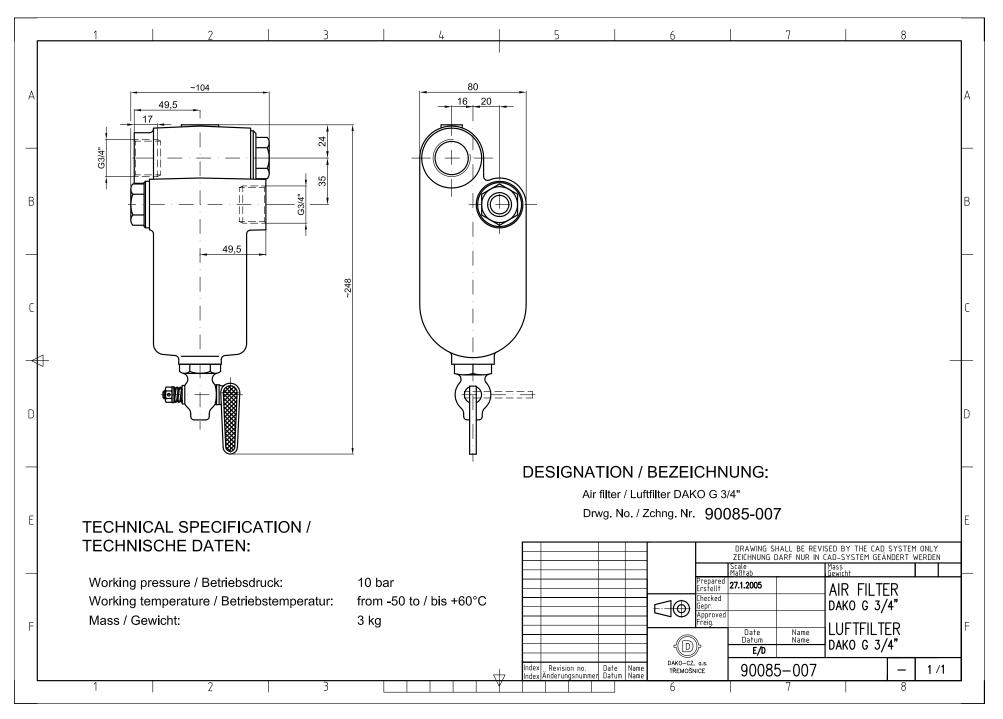


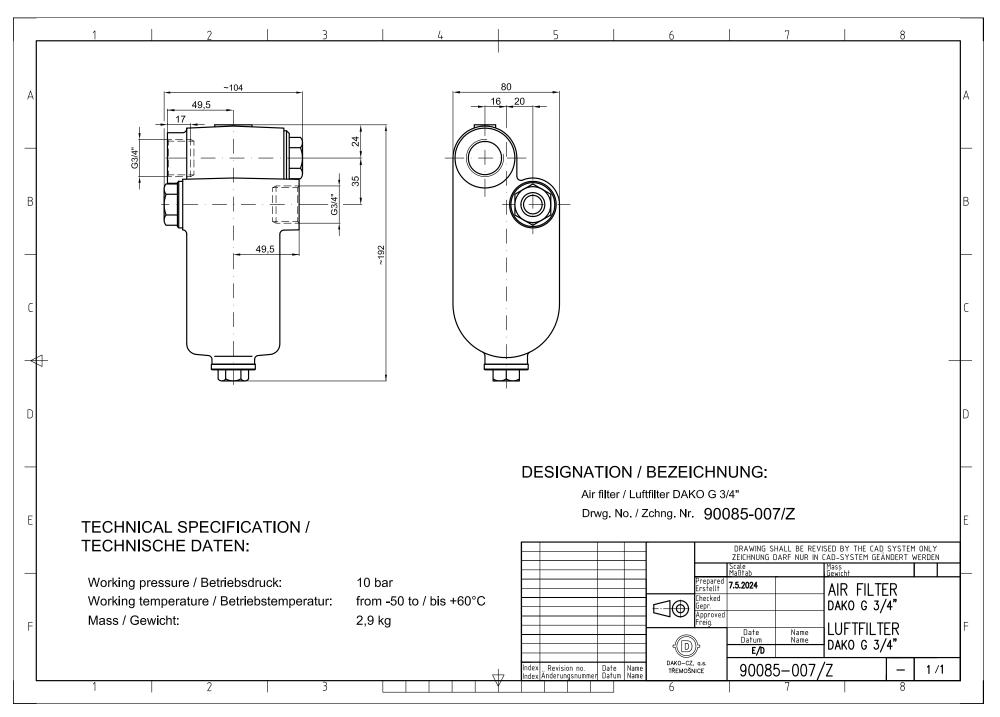


# 10. DUST COLLECTORS

10.1 Dust collector 1"10.2 Dust collector 1 ¼"



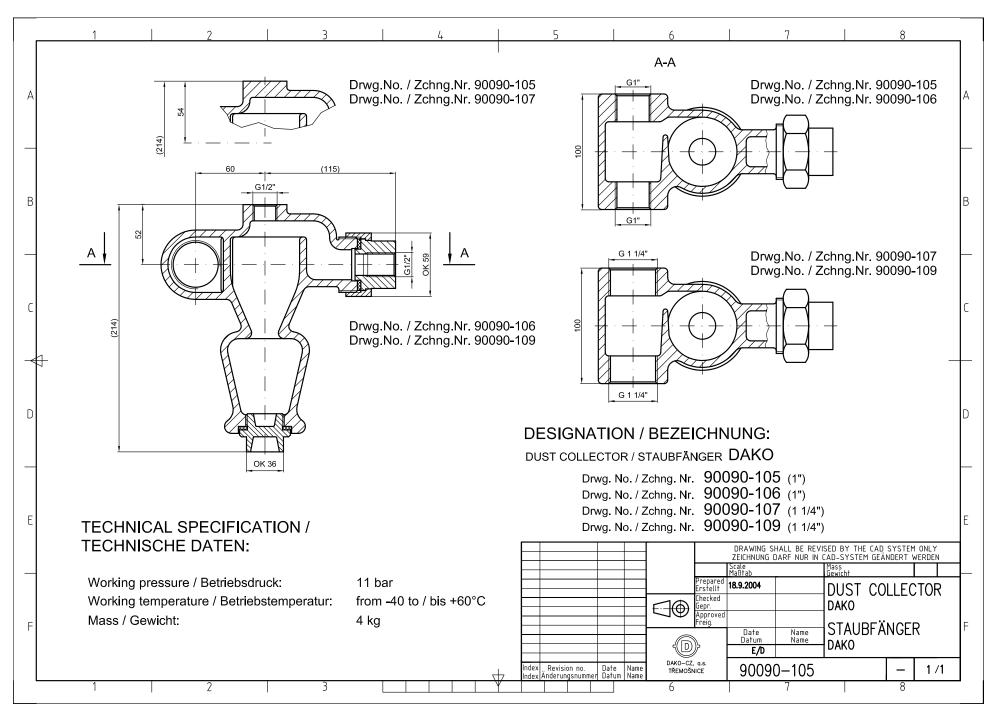

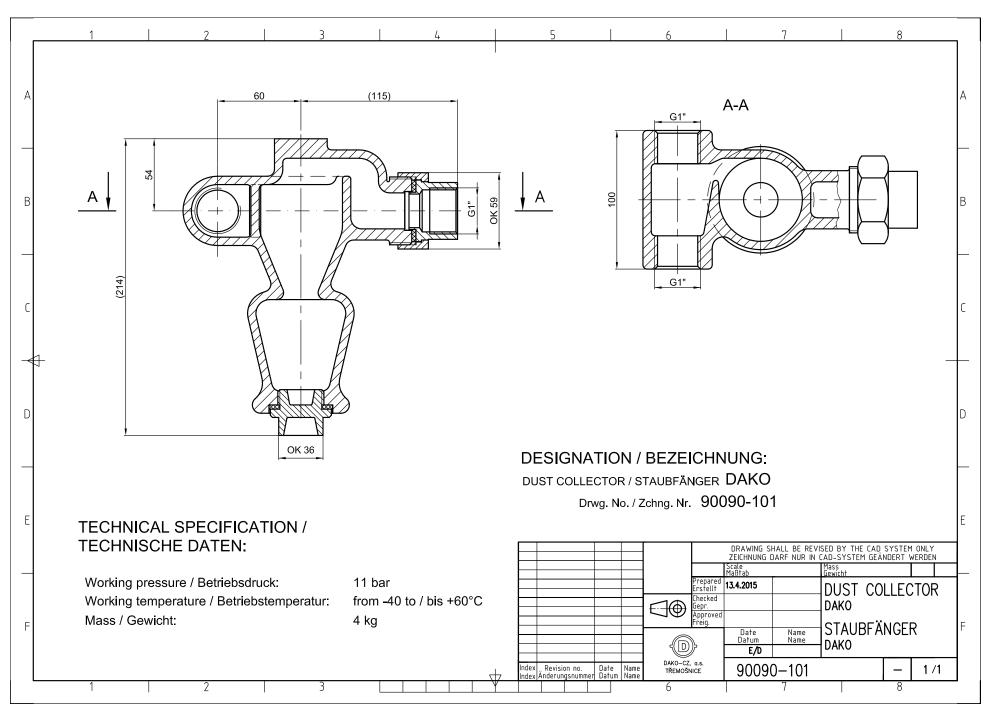



## 11. DIRECT COCKS DAKO KZ and KZS


- 11.1 Direct cock DAKO KZ 1"
  - right type with venting or without venting
  - left type with venting or without venting
- 11.2 Direct cock DAKO KZ 3/4"
  - right type with venting or without venting
     left type with venting or without venting
- 11.3 Direct cock DAKO KZ 1/2"
  - right type with venting or without venting
  - left type with venting or without venting
- 11.4 Direct cock DAKO KZ 3/8"
  - right type with venting or without venting
  - left type with venting or without venting
- 11.5 Direct cock DAKO KZS 1"
  - right type with venting or without venting
    left type with venting or without venting
- 11.6 Direct cock DAKO KZS 1"
  - right type with venting or without venting
  - left type with venting or without venting







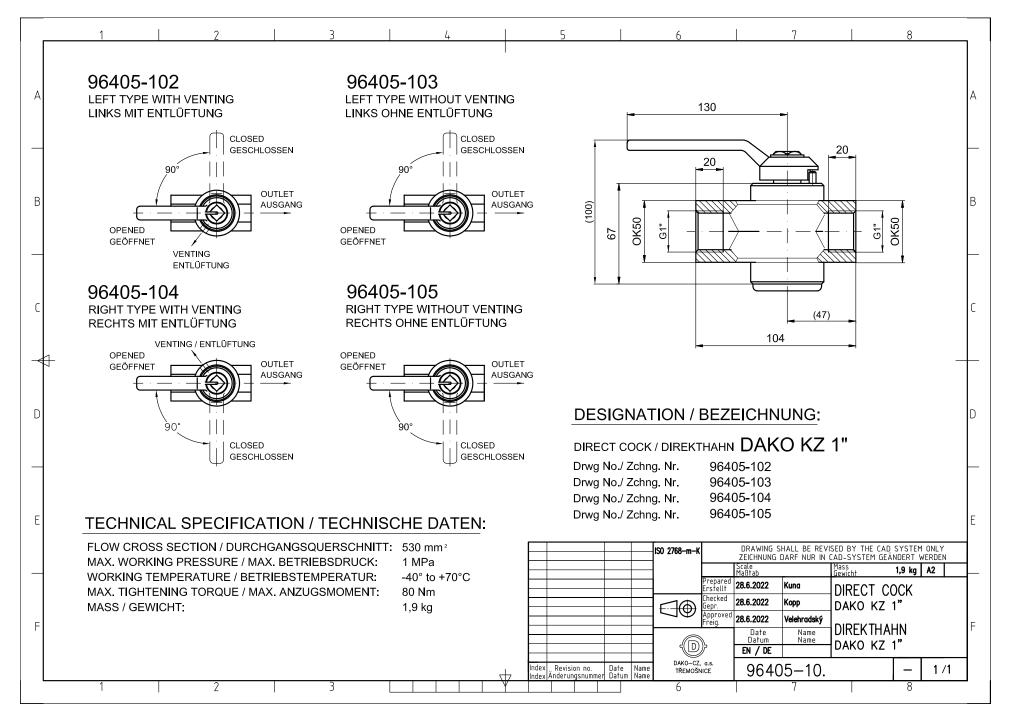


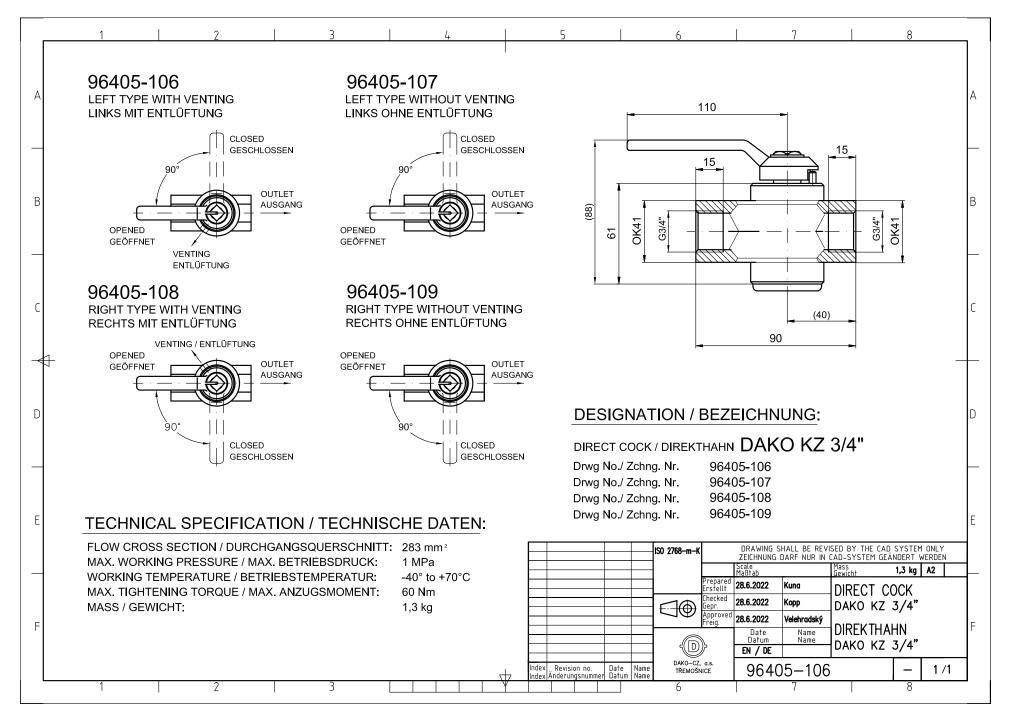

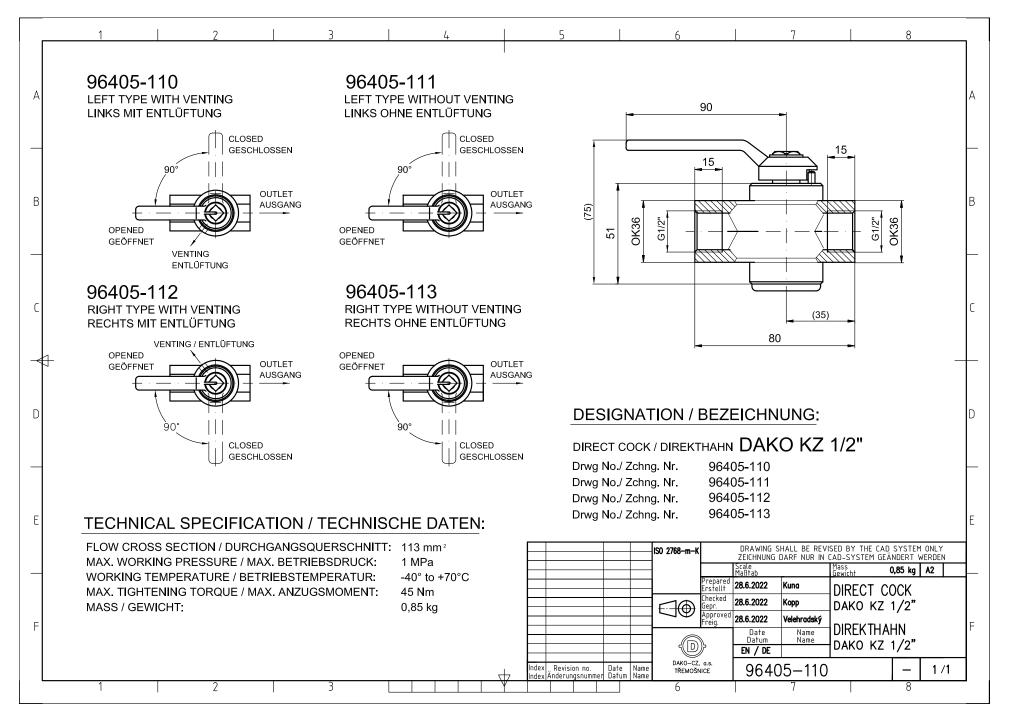

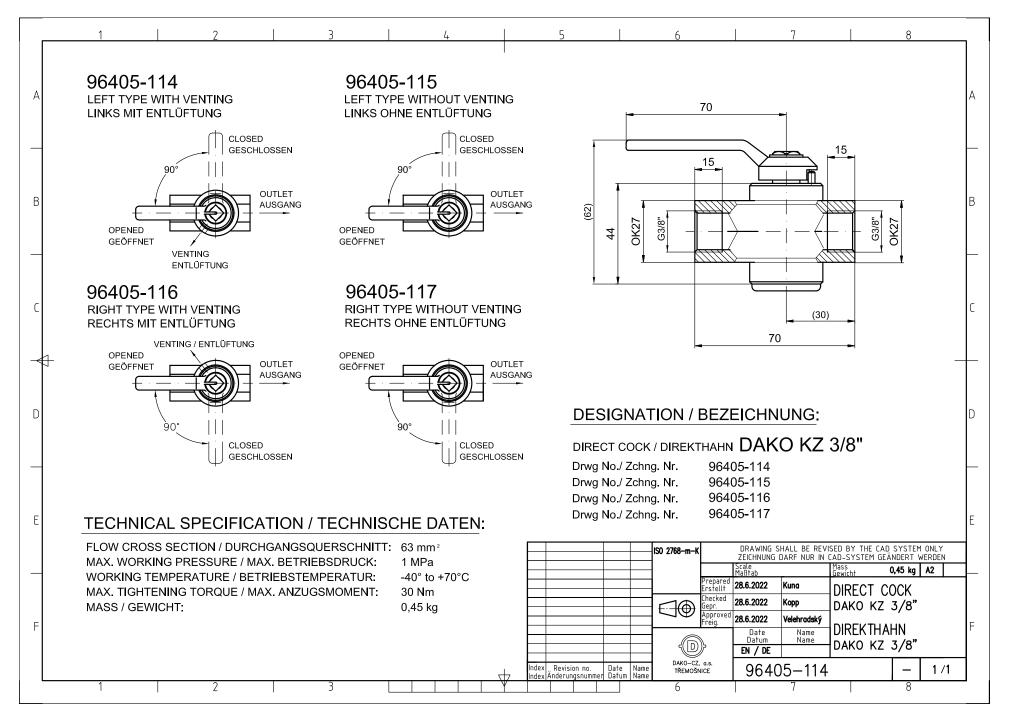

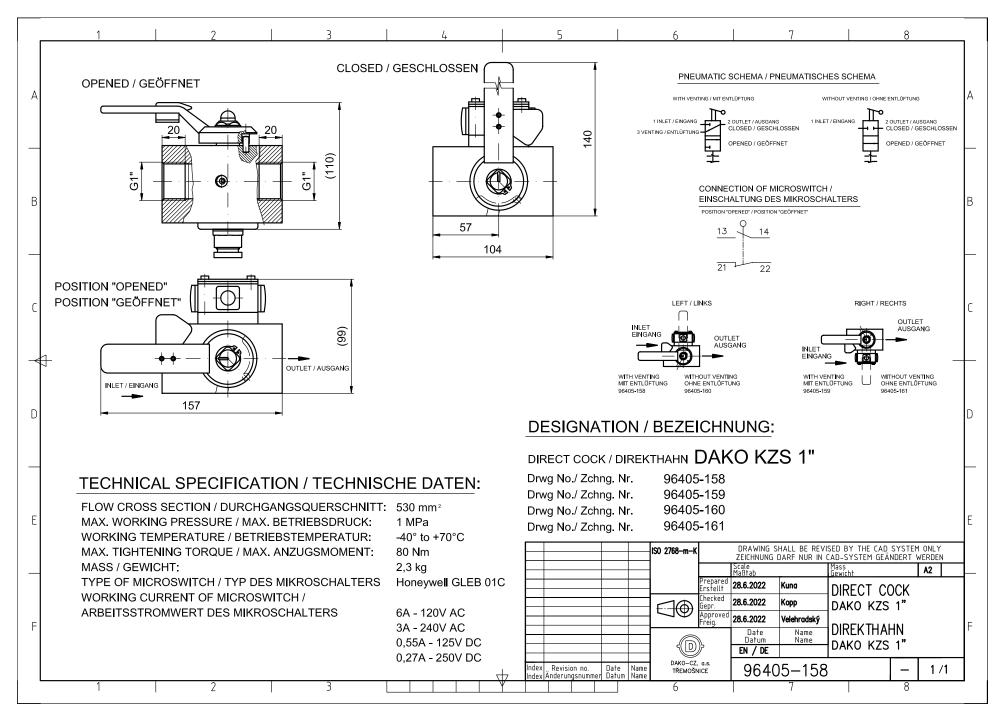


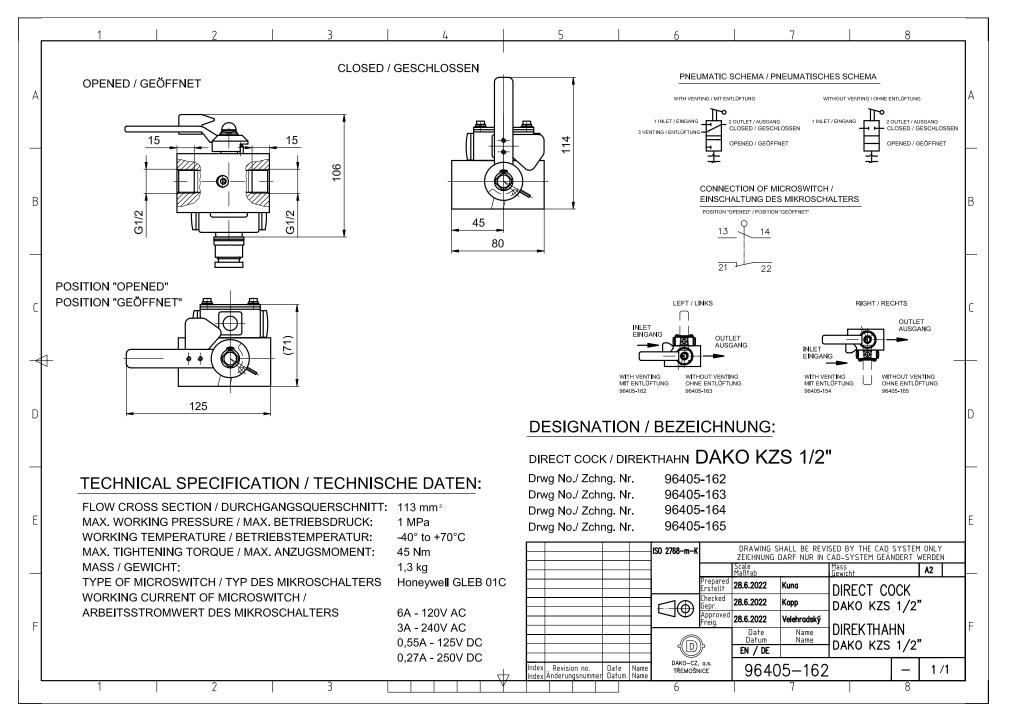



# 12. NON-RETURN VALVES DAKO


- 12.1 Non-return valve DAKO JV6 four designs
- 12.2 Non-return valve DAKO JV10 four designs
- 12.3 Non-return valve DAKO JV15 four designs
- 12.4 Non-return valve DAKO JV25 four designs



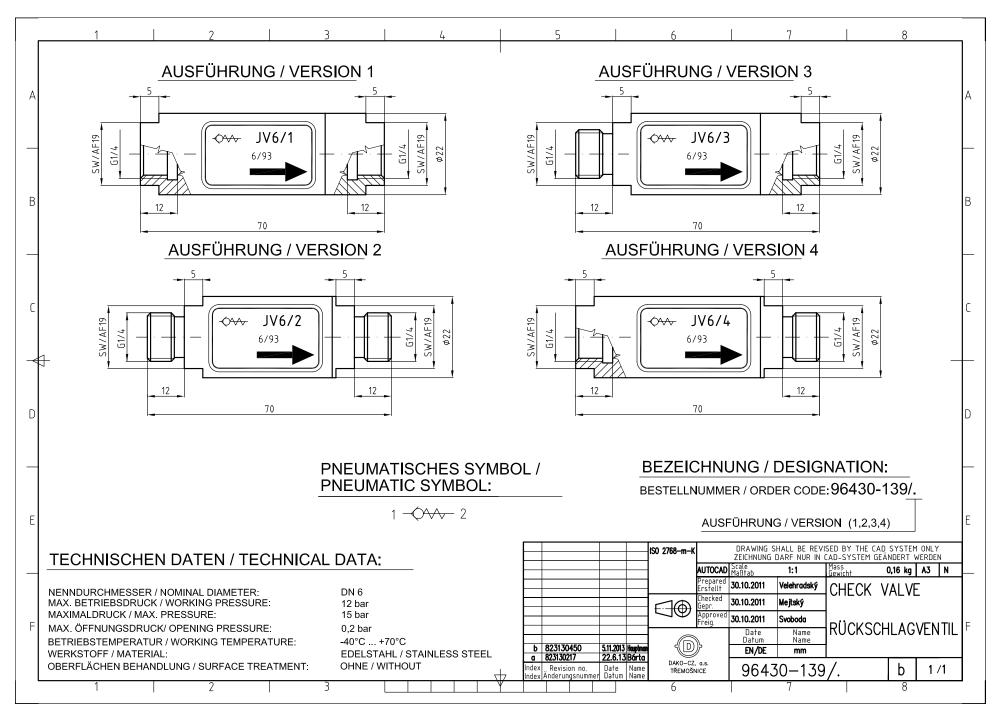

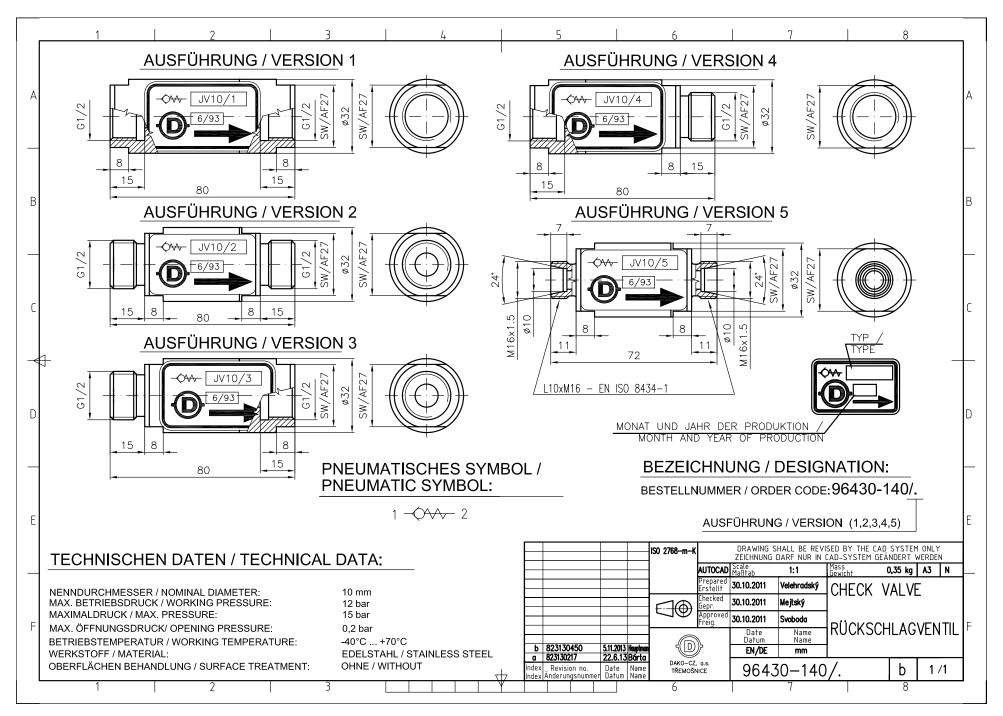


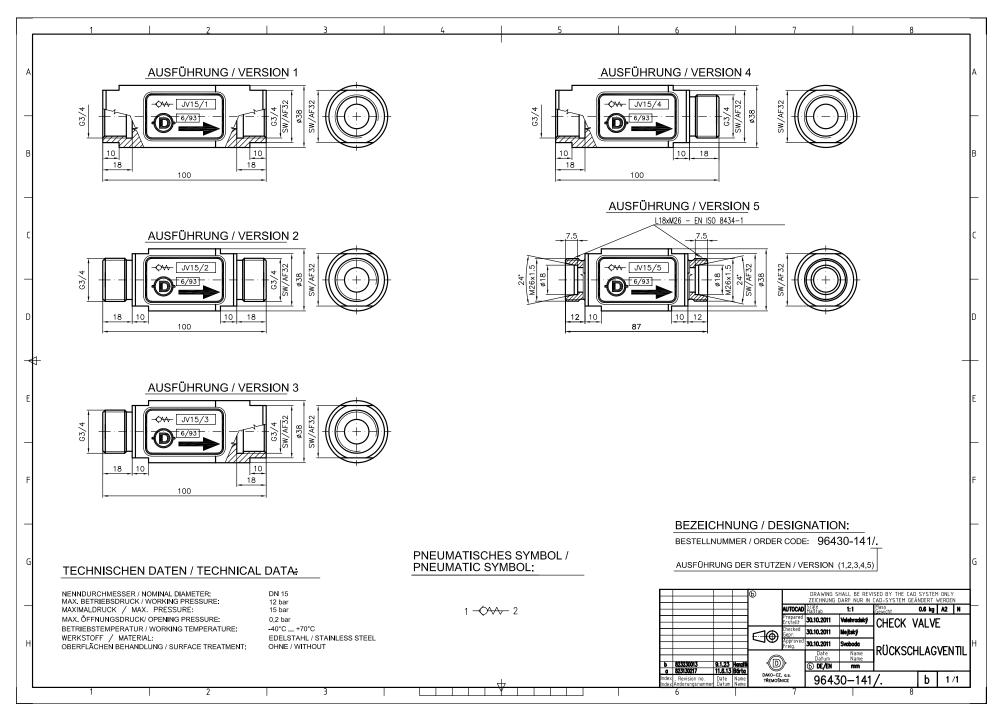

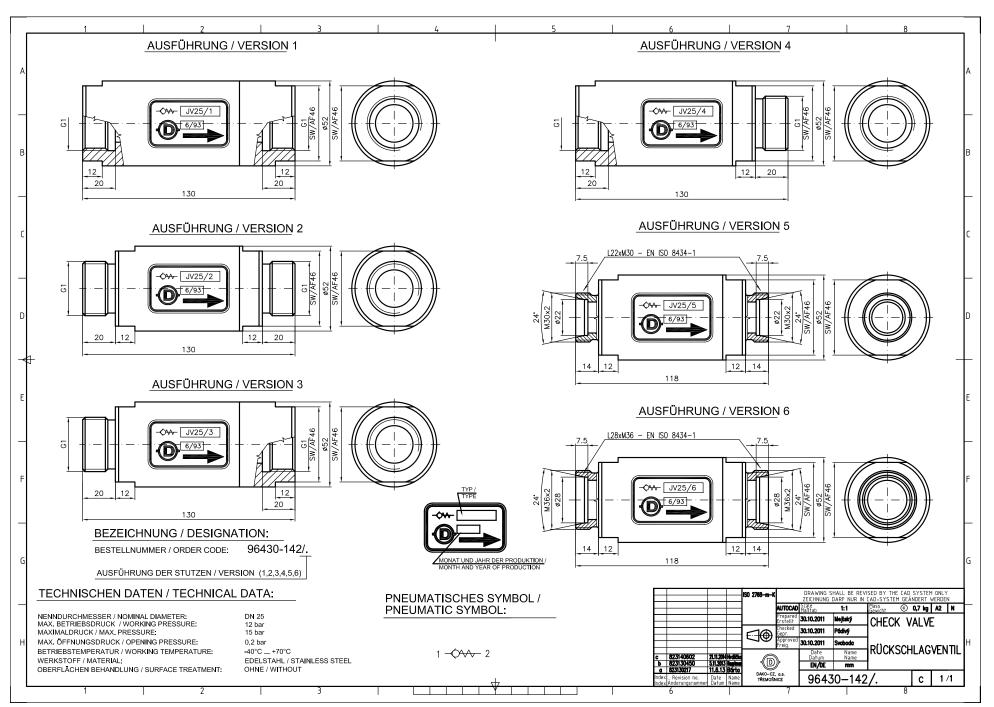



#### (D) LOCOMOTIVE - (D) FREIGHT - (D) COACH - (D) MAINTENANCE - (D) XMU SOUTIONS


## 13. AIR COUPLINGS

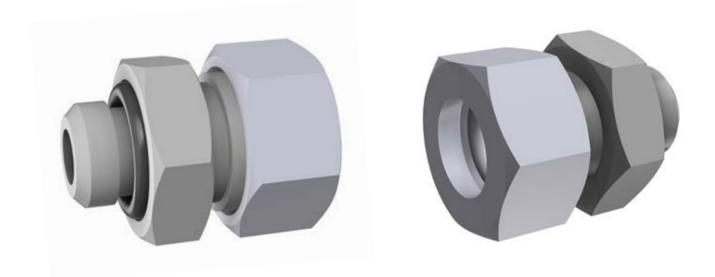


(D) LOCOMOTIVE - (D) FREIGHT - (D) COACH - (D) MAINTENANCE - (D) SOLUTIONS

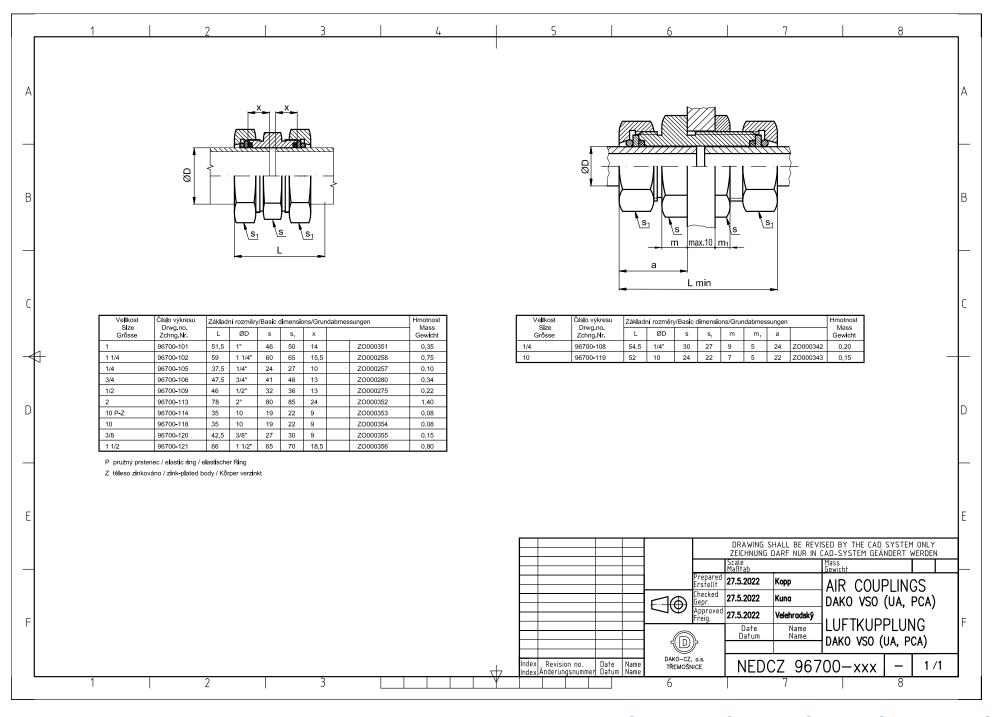


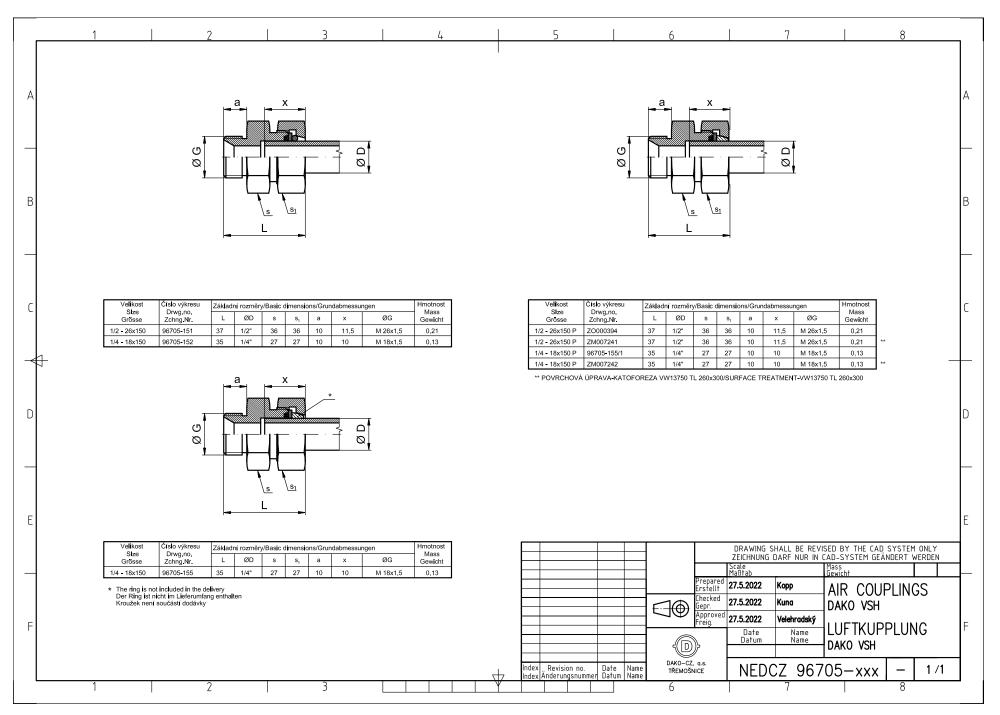

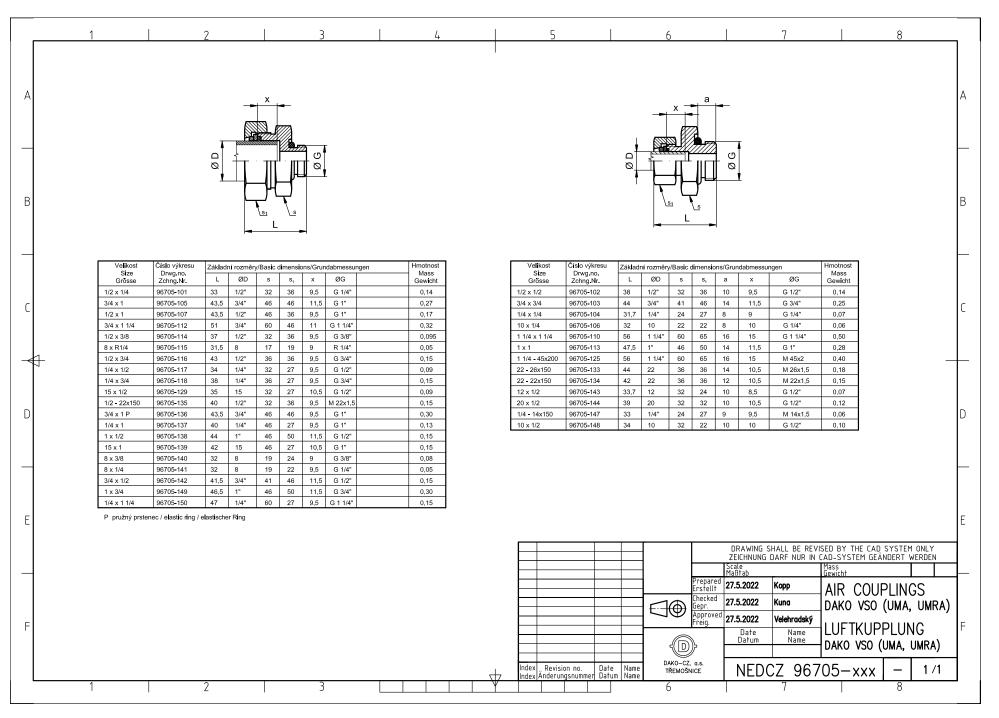

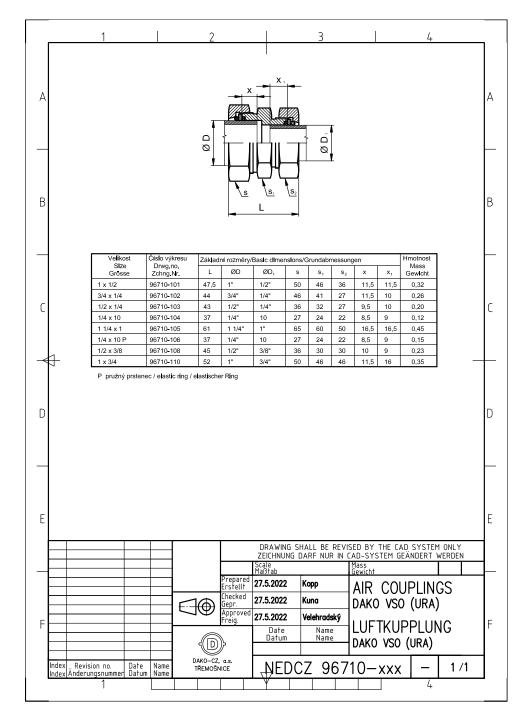



#### DRAWINGS CATALOGUE OF SELECTED DAKO AIR BRAKE PARTS INTERCHANGEABLE FOR BRAKE PARTS OF OTHER PRODUCERS

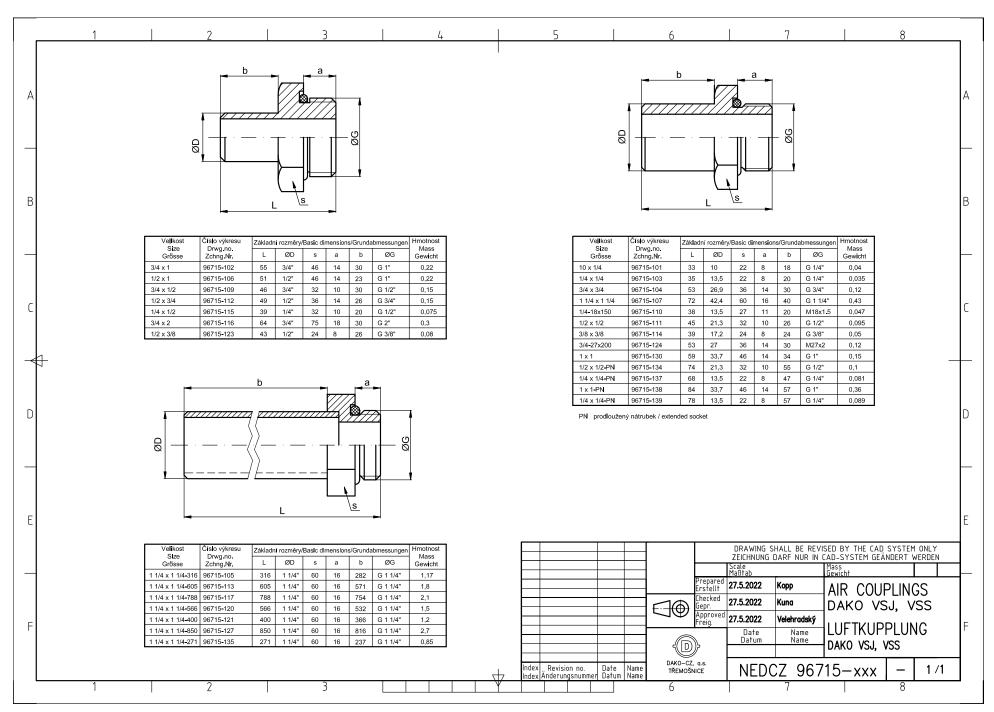






B

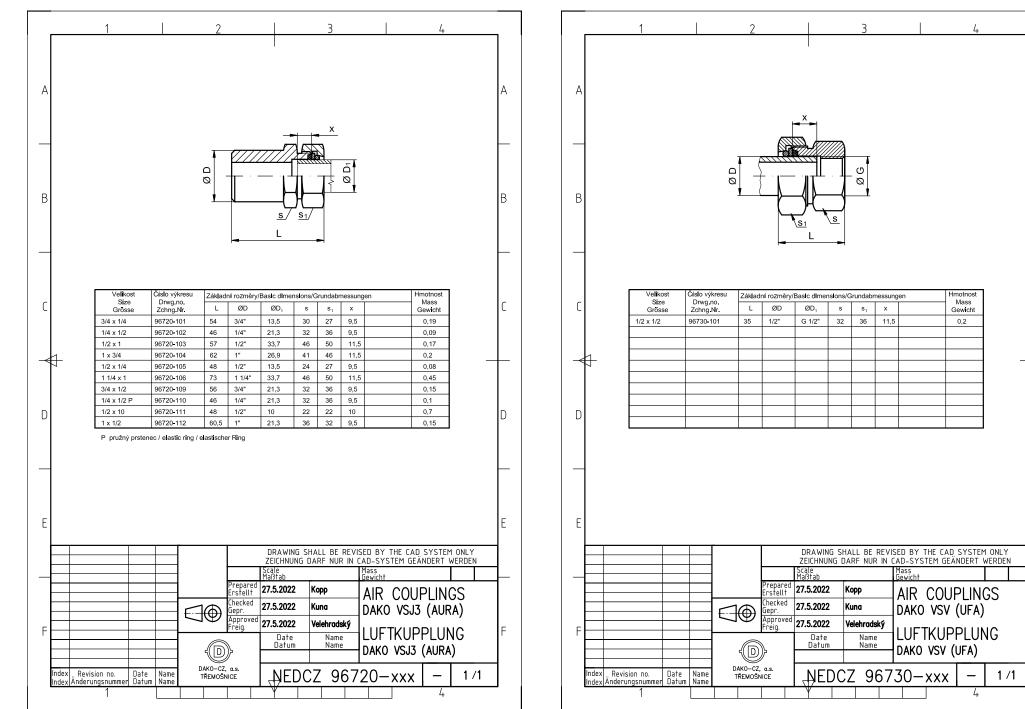

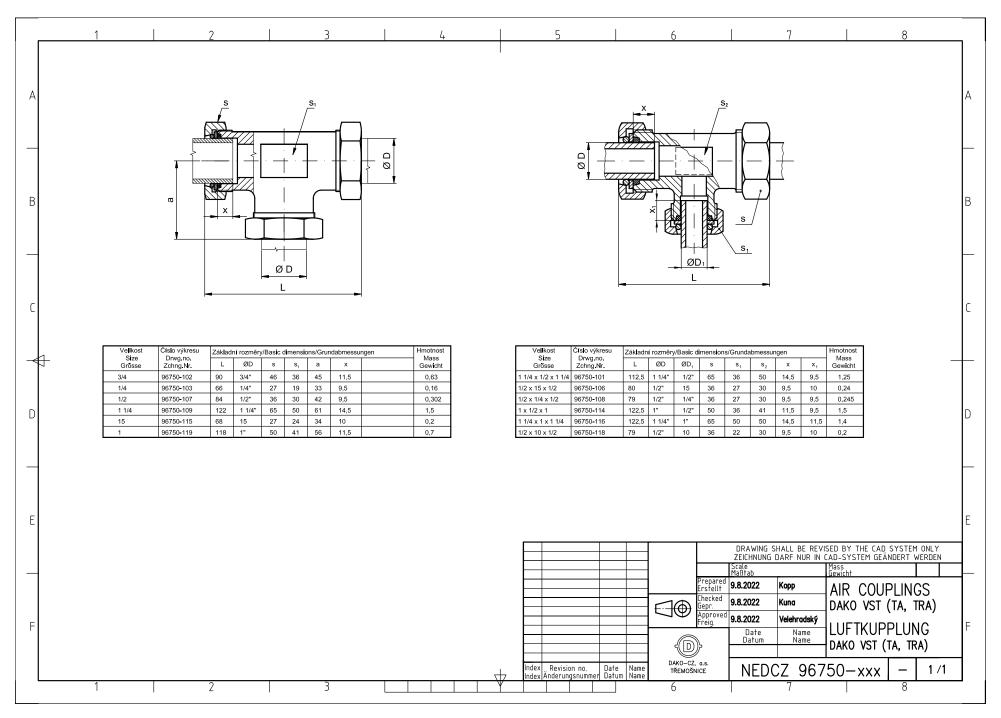


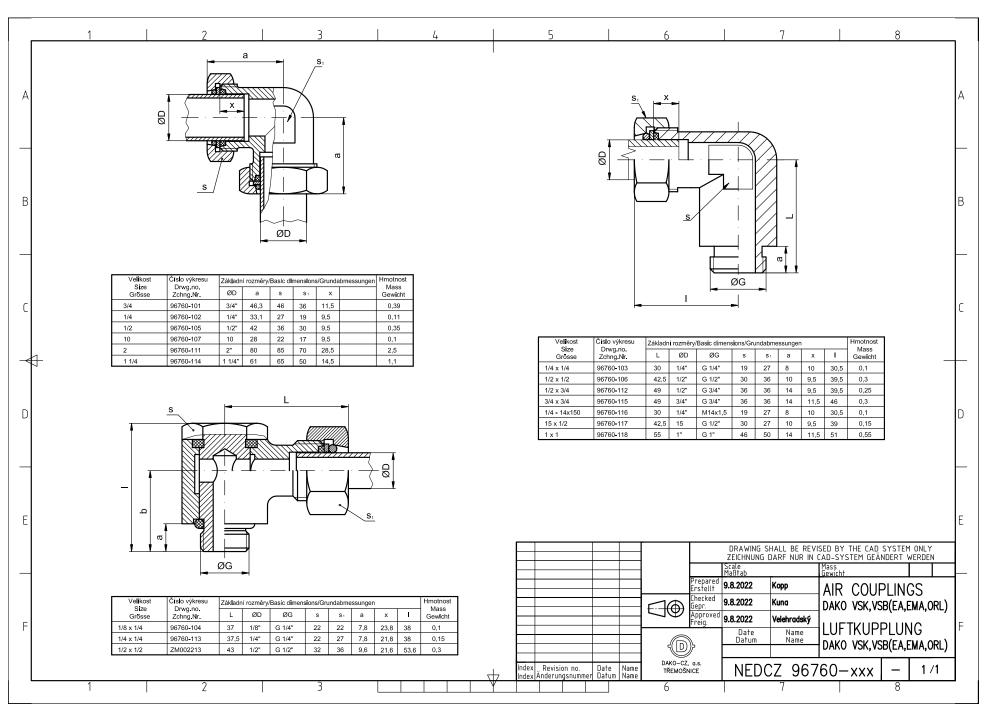

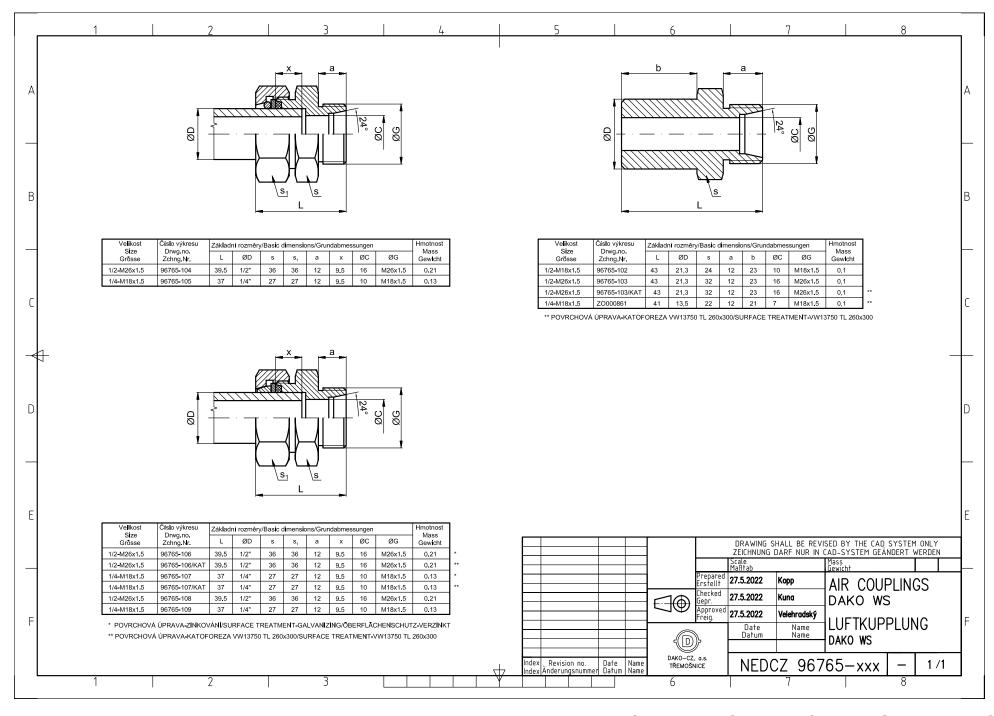

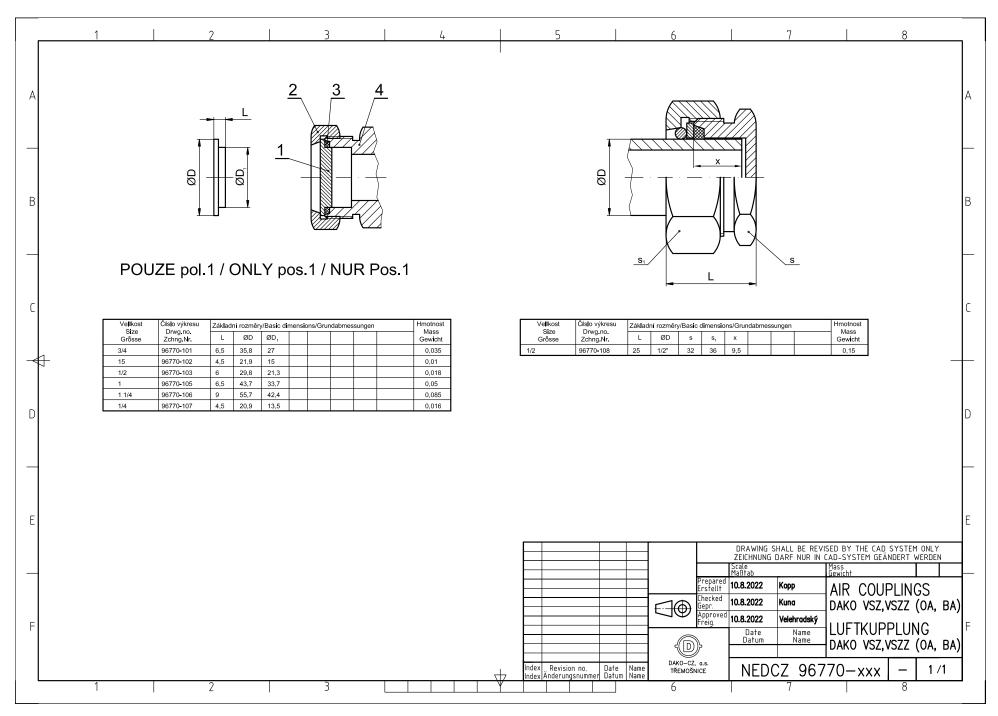

#### **UIC WORLD MEMBERS**

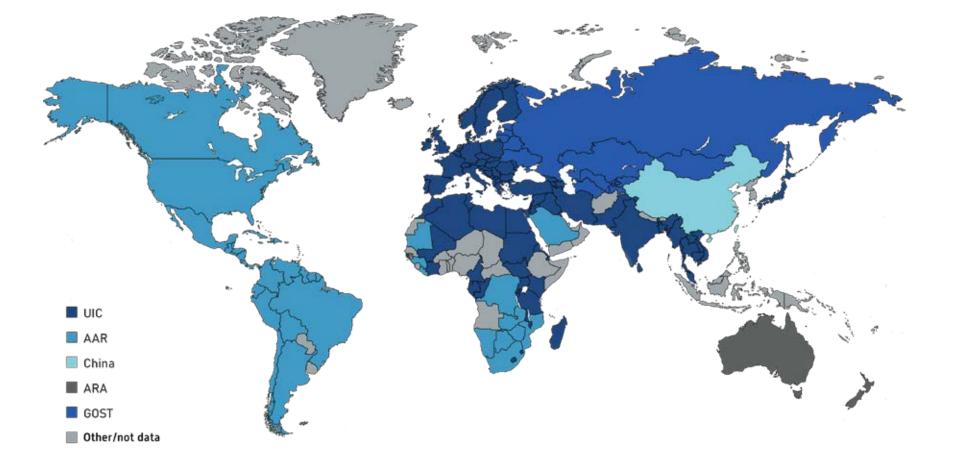

(D) LOCOMOTIVE - (D) FREIGHT -

 $(\mathbf{D})$  COACH -  $(\mathbf{D})$  MAINTENANCE -  $(\mathbf{D})$  xMU



#### DAKO-CZ, A.S.

JOSEFA DAŇKA 1956 538 43 TŘEMOŠNICE CZECH REPUBLIC TEL.: +420 469 617 111 E-MAIL: DAKO-CZ@DAKO-CZ.CZ







